



325 CC

OWNER'S MANUAL

2022 MODEL YEAR



325 CC

Dear World Cat Owner:

Thank you for being our customer. Welcome aboard!


We wish to take this opportunity to sincerely thank you for putting your trust in our boat building team and becoming the newest member of the World Cat Family.

The following manual is designed to ensure you enjoy your new World Cat for many years to come. We have made every effort to ensure you and your family are safe, enjoy the unique features of a World Cat, and continue to love the World Cat ride that no other boat company can offer.

If you should ever need assistance with the care, maintenance, or operation of your boat, then please visit our website at WorldCat.com to find contact information for your nearest Factory Authorized Dealer.

Once again, thank you for becoming a part of our family.

Best Regards,

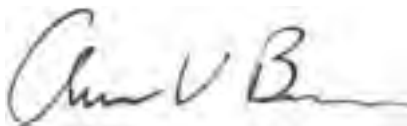

ANDREW BROWN
President

Best Regards,



ANNA BOSLER
Customer Care Representative



1090 West Saint James St., Tarboro, North Carolina 27886

TABLE OF CONTENTS

Chapter 1: Customer Information	5
1.1 Owner's Portfolio	5
1.2 Warranty Information	5
1.3 Dealer Responsibilities	5
1.4 Owner's Responsibilities	6
1.5 Manual Legend	6
Chapter 2: Boat Information	7
Chapter 3: Boat Specifications	8
3.1 325CC Standard Boat Specs	8
3.2 325CC Standard and Optional Features	9
Chapter 4: Safety and Regulations	10
4.1 Operator Responsibilities	10
4.2 Registration	10
4.3 Coast Guard Required Safety Equipment	10
4.4 Recommended Safety Equipment	11
4.4.1 NMMA Yacht Certification	11
4.5 Pollution Regulations	11
4.5.1 Oil and Hazardous Substances	11
4.5.2 Disposal of Plastics / Dunnage / Garbage	12
4.6 Boating Safety Guidelines	12
4.6.1 Pre-Departure	12
4.6.2 Launching	12
4.6.3 Underway: (See Chapter 5 on Performance)	12
4.6.4 Returning	13
4.7 Trailering	13
4.8 Anchoring	13
4.9 Shallow Water	14
4.10 Emergency Situations	14
4.10.1 Emergency Stop Switch	14
4.10.2 Communication	14
4.10.3 Rendering Assistance	14
4.10.4 Reporting Accidents	14
4.10.5 Weather	14
4.10.6 Towing	15
4.11 Carbon Monoxide (CO)	15
Chapter 5: Performance	16
5.1 Overview	16
5.2 Motor Trim	16
5.2.1 Bow Up Condition	16
5.2.2 Bow Down Condition	16
5.3 Engine Controls	16
5.4 Steering Controls	17
5.5 Steering Maintenance	17
5.6 Power Steering System Diagram	18
5.6.1 Power Steering System - Bleeding Instructions	18
5.7 Handling Characteristics	20
5.7.1 Turning Characteristics.....	20
5.7.2 Adverse Sea Conditions.....	20
5.7.3 Cross-Clutching.....	20
5.7.4 Get the Boat on Plane	20
5.7.5 Keep the Boat Level	20
5.7.6 Handling Different Sea Conditions.....	21
5.7.7 Boating Tips	21
5.8 Performance Factors	21
5.8.1 Engine Efficiency	21
5.8.2 Propeller Condition	21
5.8.3 Weather Conditions	22

5.8.4	Load	22
5.8.5	Marine Growth	22
5.8.6	Bottom Paint	22
Chapter 6:	Systems Information	23
6.1	Overview	23
6.2	Fueling Guidelines	23
6.2.1	Before Fueling	23
6.2.2	During Fueling	23
6.2.3	After Fueling	23
6.3	Fuel System	24
6.3.1	Fuel System Benefits	24
6.3.2	Fuel Tank	24
6.3.3	Fuel Vent	24
6.3.4	Fuel Distribution System	25
6.3.5	Filling Fuel Tanks	25
6.3.6	Pressure Relief Fuel System Diagram	26
6.3.7	Trouble Shooting Tips	26
6.3.8	Integrated Fuel Demand Valve Components	26
6.4	Ethanol-blended Fuel	27
6.4.1	Additives	27
6.5	Electrical System	27
6.5.1	Battery System	27
6.5.2	Battery Distribution	27
6.5.3	Emergency Parallel	28
6.5.4	Voltage Sensor Relay (VSR)	28
6.5.5	24 Hour Circuits	28
6.5.6	Anchor Windlass	28
6.6	Battery Selection	28
6.6.1	Battery Care	28
6.6.2	Safety	29
6.6.3	Exposure	29
6.7	Wiring and Circuit Protection	29
6.8	Control System	29
6.9	Dash Switch Panel	30
6.10	Accessories	30
6.10.1	Navigational Lights	30
6.10.2	Cockpit Lights	30
6.10.3	Cabin / Console Lights	30
6.10.4	Spreader Lights	31
6.10.5	Overhead Light	31
6.10.6	Bilge Pump / Float Switch	31
6.10.7	Raw Water Pump	31
6.10.8	Freshwater Pump	31
6.10.9	Macerator Pump	31
6.10.10	Livewell and Livewell Pump	32
6.10.11	USB Outlets	32
6.10.12	Anchor Windlass - Freefall	33
6.10.13	Windshield Wipers (Optional)	33
6.10.14	Horn	33
6.10.15	Shower	33
6.10.16	Yamaha™ 300 HP 4-Stroke with Command Link Plus	33
6.10.17	Fusion® Marine Entertainment System	33
6.10.18	Fusion® Marine Wired Remote	33
6.10.19	LED Underwater Light Package (Optional)	33
6.10.20	Accessory Switch (ACCY)	33
6.10.21	Optimus Electronic Power Steering Package	34
6.10.22	Optimus 360 with Electronic Steering, SeaStation, Joystick, and SeaWays Autopilot (Optional)	35
6.10.23	Marine Head	36
6.10.24	Plumbing System	37

6.10.25	ProMariner ProSport-20 3-Bank Battery Charger.....	37
6.10.26	Windshield	37
6.10.27	Outriggers (Optional)	37
Chapter 7:	Maintenance and Service	38
7.1	Overview	38
7.2	Gelcoat Maintenance	38
7.2.1	Cleaning	38
7.2.2	Waxing	38
7.2.3	Repair	39
7.3	Bottom Paint	39
7.4	Upholstery Care - Standard Tri-Color Upholstery	40
7.5	Upholstery Care - Optional Solid Upholstery	41
7.6	Trim / Plexiglass / Polyethylene	43
7.7	Stainless Steel	43
7.8	Powder Coating	43
7.9	Bilge Compartments	43
7.10	Cockpit Drains	43
7.11	Winterization	44
7.12	Maintenance Schedule	45
7.14	Maintenance Log	46
7.15	Lewmar (Provided by Lewmar)	47
Chapter 8:	Hurricane / Moored / Anchored Preparations	51
Chapter 9:	Model Year 2022 Warranty Policy	54
Chapter 10:	325CC Operation	57
10.1	Operation of Standard Equipment	57
10.1.1	Battery Layout and Management	57
10.1.2	Additional Emergency Parallel	57
10.1.3	Bilge Pumps / Float Switches	57
10.1.4	Freshwater System	58
10.1.5	Seacocks	58
10.1.6	Livewell System	58
10.1.7	Raw Water System	59
10.1.8	Wiper with Rinse	59
10.1.9	Marine Head	59
10.1.10	Anchor Windlass	61
10.1.11	Windlass Deck Switch Maintenance	61
10.2	Maximum Horsepower Rating	61
10.3	Operation of Optional Equipment	61
10.3.1	Outriggers	61
10.3.2	Battery Charger	61
10.4	System Diagrams	62
10.4.1	Access Plate and Rigging Tube Diagram	62
10.4.2	Hardtop Wiring Diagram	63
10.4.3	Console Wiring Diagram	64
10.4.4	Battery Panel Wiring Diagram	65
10.4.5	Dash Wiring Diagram	66
10.4.6	Hardtop Panel Wiring Diagram	67
10.4.7	Water Systems Diagram	68
10.4.8	Thru Hull Diagram	69
	Notes	70

Chapter 1: Customer Information

1.1 Owner's Portfolio

To help you enjoy the many features, benefits, and accessories on your new World Cat, we have provided you with the following materials:

- World Cat Owner's Manual (model specific)
- Vendor Supplied Manuals for various accessories
- Delivery Checklist
- Warranty Information

We refer to this package as the Owner's Portfolio, and will reference it often throughout this text. The portfolio contains a wealth of information, including advice on safety, operation, performance, maintenance, and warranty. Reading and maintaining this information is extremely important, and could be the difference between a positive and negative experience on the water.

1.2 Warranty Information

Upon purchasing your new World Cat, your dealer is responsible for completing the warranty card and returning a copy to the factory. The dealer should provide you with a copy to keep in a secure place so it can be referenced quickly in the event of a warranty issue. Please read your written warranty.

1.3 Dealer Responsibilities

Our dealers are an extension of the factory and we expect them to provide you with great customer service to help prepare you for a positive ownership experience. Therefore, we set forth a list of responsibilities for our dealers as follows:

- Provide courteous service and explanation of the product prior to the sale.
- Provide sea trials for potential owners.
- Provide a detailed orientation of your boat's features and general operation upon delivery, including safety and performance.
- Complete and sign delivery checklist.
- Explain, complete, and submit all warranty information in a timely manner after the purchase.
- Provide the customer with the Owner's Portfolio and explain the information included therein.
- Provide service after the sale, or help the customer locate a qualified service shop at home or away.

1.4 Owner's Responsibilities

As an owner you should also take an active part in the delivery and safe operation of your new catamaran. Some of your responsibilities are:

- Study and understand the limited warranty information.
- Read all literature in your Owner's Portfolio and operate the vessel in accordance with those instructions.
- Review the Customer Delivery Inspection Sheet with your dealer prior to the final purchase and closing to ensure that the systems are functioning properly.
- Maintain the boat and perform service according to the instructions in this manual, including the 20 hour inspection for the vessel and engines.

It is your responsibility to return your boat to an Authorized World Cat Dealer for warranty work. In the event there is no World Cat dealer within a 100 mile radius of your boating location, it is your responsibility to present the boat to a marine professional in your area as directed and approved by World Cat.

Once your warranty information is processed, World Cat will maintain a record of your boat using the Hull Identification Number (HIN), which is located on the starboard side of the transom. Information regarding the dealership, owner, and the factory installed accessories will be recorded to help you should a problem arise. Also, you will receive a survey to rate your purchasing experience and the initial impressions of our company. We ask that you join our family of owners and let us know your feelings about the purchase and the quality of our product.

1.5 Manual Legend

Throughout this manual you will encounter signals to alert of important information. Text printed in bold letters and the warning system shown below is of particular importance. Please review this information prior to reading the manual.

!!! DANGER

This symbol alerts you to hazards or unsafe practices which will cause extensive property damage, severe personal injury or death if the warning is ignored.

!!! WARNING

This symbol alerts you to hazards or unsafe practices which can cause extensive property damage, severe personal injury or death if the warning is ignored.

!!! CAUTION

This symbol alerts you to hazards or unsafe practices which can cause personal injury or property damage if the warning is ignored.

NOTICE

This symbol is not hazard related. It contains information on installation, operation, or maintenance which is needed to ensure the proper operation of your boat.

Chapter 2: Boat Information

Please fill out the following information and leave in this manual for reference. This information will be important for your Authorized Dealer to provide fast and accurate service. To locate an authorized dealer call 866-485-8899 or email service@worldcat.com.

BOAT	
Model:	HIN:
Purchase Date:	Delivery Date:
Ignition Key #:	Door Key #:
ENGINES	
Make:	Model:
Serial # Port:	Serial # Stbd:
Propeller Make / Model:	Propeller Diameter / Pitch:
TRAILER	
Make:	Model:
Serial # Port:	Serial # Stbd:
DEALER	
Name:	Salesman:
Dealer Phone:	Service Manager:

325CC


VERSATILE OFFSHORE PERFORMANCE



LENGTH	BEAM	FUEL CAPACITY	DRY WEIGHT	DRAFT
32' 2"	10' 6"	279 _{gal}	10,100 _{lbs}	16"

SPECS

Length: 32' 2"
Beam: 10' 6"
Draft: 16"
Freeboard Aft: 28"
Transom Height: 25"
Dry Weight w/ Power (approx): 10,100 lbs
Max HP Rating: 800 HP (2 x 400 HP)
Fuel Capacity: 279 gal (2 x 139.5 gal)
Livewell Capacity: 45 gal
Freshwater Capacity: 20 gal
Wastewater Capacity: 15 gal
Trailer Height*: 10' 6"
Bridge Clearance*: 9' 0"
Cockpit Length: 54"
Typical Cruise: 28.3 mph / 1.5 mpg
Typical WOT: 52.2 mph / 1.0 mpg
Passenger Capacity: 12

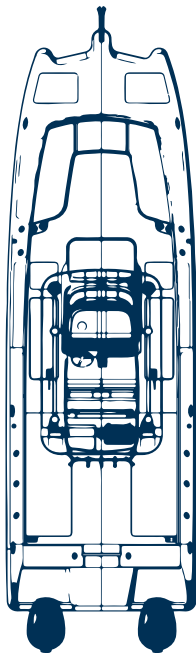

HIGHLIGHTS

- Enormous deck space
- Outstanding offshore fishing boat w/ massive fishbox capacity
- Leading dive ladder on the market

*Measured keel to top of fiberglass hardtop w/ no outriggers or electronics installed (not including trailer)

FEATURES

Bow

- Molded-in bow pulpit w/ roller & cleats
- Pro Series free-fall windlass w/ 300' line, 15' chain, 22 lb. polished S.S. anchor, & foot switches
- Anchor locker w/ (2) hatches & raw water washdown hose
- Bow seating w/ cushioned backs for 6 adults
- Port & starboard deck recessed handrails for added safety
- (4) cup holders (2 per side) on gunwale cap
- Tub storage w/ white starboard ring
- Insulated 225 qt. port & starboard storage compartments w/ overboard drains for use as fish boxes, coolers or dry storage
- Insulated 105 qt. center storage compartment w/ overboard drains for use as a fish box, cooler or dry storage
- (2) 500 GPH forward bilge pumps w/ auto switches
- Double-wide bucket seat w/ armrests forward of the console w/ integrated cup holders & storage
- Forward seating backrests
- (2) 6.5" white sport deck speakers
- USB charger

Helm

- Fiberglass top w/ powdercoated aluminum frame, black acrylic-faced radio box/overhead electronics panel, overhead LED lights, (5) rod rocket launcher & spreader lights
- Fusion® marine entertainment system w/ (4) white sport JL Audio speakers & Bluetooth
- Integrated battery charging system
- Ergonomically designed fiberglass console w/ wraparound safety glass windshield & opening side-vents integrated into the hardtop
- Pantograph-style heavy-duty windshield wiper w/ rinse
- Console marine head w/ 15 gal. holding tank & overboard discharge
- Fiberglass console w/ electronics area, netted storage compartments, (2) S.S. cup holders, passenger handrail, footrest, insulated storage compartment, & black dash brow

- Large electronics area capable of (2) 16" screens
- S.S. wheel w/ power knob
- Power assisted hydraulic steering system
- Deluxe captain's helm chairs w/ armrests & dual flip-up bolsters
- Fiberglass leaning post tackle center w/ sink, 45 gal. insulated, raw water livewell w/ 1100 GPH magnetic drive pump, overboard drain, & a clear lid
- Tackle center raw water washdown & storage drawers
- Tackle center integrated toe rail
- Tackle center compartment for power assist pump access
- Battery select switches w/parallel capability in console
- Recessed tray in dash brow

Stern

- Insulated 300 qt. port & starboard in-deck fish boxes w/ diaphragm pumps
- Port & starboard lockable rod storage compartments to accommodate 3 offshore rods per side
- Molded-in toe rails & full cockpit bolsters
- Port & starboard sealed fuel-filler compartments for easy maintenance
- Port & starboard gunwale-mounted lockable bulk storage (54"x16"x9" deep storage cabinet w/ 4/5" fiddle rail starboard; 24"x16" starboard tilt-out storage cabinet)
- (12) gunwale-mounted SMITH rod holders: (4) in the bow (2 each side); (4) aft each side port & starboard
- (6) pull-up S.S. cleats
- YETI 65 qt. coolers w/ cushions & coaming pad bolster (port & starboard)
- Walk-through transom w/ door & transom storage
- Freshwater transom shower w/ 20 gal. water tank
- Extended swim platform w/ integrated handrails & ladder
- (4) batteries in walk-through transom area
- Transom insulated storage tub w/ acrylic lid (34"x9"x13" deep)
- (6) Flush mount fender holders

OPTIONS

Engine Packages

- Yamaha F300X Engines w/ Yamaha Digital Electronic Steering, EX controls & CL7 display (gray)
- Yamaha F300X Engines w/ Yamaha Digital Electronic Steering, EX controls & CL7 display (Yamaha pearlescent white)

Accessories

- Edson wheel 14.5" satin-finish w/ power knob
- Sun lounge filler w/ cushion
- Heavy-duty, reinforced, S.S. lifting eye
- SeaDek anti-fatigue helm mat (gray)
- Removable bow table w/ dedicated storage
- Motor well rocket launchers (3/side)
- Mezzanine seat leaning post w/ 40 gal. livewell, tackle storage, & fold away step

Electronics

- Dual Garmin GPSMAP® 8616xsv 16" multi-touch widescreen Chartplotter / Sonar Combo, Airmar B175M transducer, dark-tinted acrylic dash, Garmin 110 VHF w/ 8' antenna, & Yamaha CL5
- LED underwater lights (blue)
- Stereo upgrade - JL Audio 800W Amp, (4) speakers upgraded to 6.5" JL Audio M6-Series speakers, & (2) additional 8.8" M6-Series speakers

Steering Systems

- Yamaha Helm Master EX Joystick w/ full function auto-pilot & drift point

Top

- Hardtop underside color: Fighting Lady Yellow, Arniston Gray, Majorca Green, Hermosa Blue, Ice Blue
- Forward bow shade (steel gray)
- GEMLUX® Deluxe outrigger system w/ 18' collapsible hybrid poles
- Black powdercoated frame & windshield

Hull Colors

- Full-hull or two-tone hull color
- Fighting Lady Yellow, Arniston Gray, Majorca Green, Hermosa Blue, Ice Blue

Bootstripping

- Single color top & bottom: Dark Red, White, Black, Dark Blue, Stardust, or Teal
- Multicolor: Stardust (top) & Black (bottom)

Shadow Series

- Full Arniston Gray hardtop, black powdercoated T-top frame, black windshield frame, Arniston Gray helm, black powdercoated motorwell rocket launchers, gray SeaDek helm pad & footrest, black console hatches, lids, & lights, black Edson wheel



Chapter 4: Safety and Regulations

4.1 Operator Responsibilities

Prior to enjoying your World Cat, it is important to read and understand all the information detailed in your Owner's Portfolio. Knowing how to operate and maintain the systems on your vessel can make your experiences safe and enjoyable, as well as increase the performance and longevity of your boat. Federal law and most state laws clearly indicate that it is the operator's responsibility to maintain their vessel, and to operate it in a manner which protects the safety of their passengers and others.

This manual will provide you a basic understanding of boating practices; however, we recommend all owners review federal, state, and local regulations regarding safety and traffic prior to using your World Cat. The U.S. Coast Guard Auxiliary and U.S. Power Squadrons offer excellent educational opportunities on a local level and are open to anyone. If a chapter does not exist in your area contact the following numbers for other educational opportunities:

Boating Education Hotline 1-800-336-BOAT (2628)
U.S. Coast Guard Boating Hotline 1-800-368-5647

4.2 Registration

Vessels are required by federal and state law to be registered in the state where they are primarily used. Registration numbers and validation stickers must be displayed per regulations, and a certificate of registration must be on board while the vessel is being operated. When traveling away from your home waters, contact authorities at your destination to determine if any additional registration is required. Some areas require permits or temporary registrations to operate in their waters. When completing registration forms you will be asked for the Hull Identification Number (HIN). On your World Cat, the HIN is located on the starboard side of the transom. This number is unique to your boat and will be important for registering your vessel, as well as communicating with your dealer and our service department. Including this information in any correspondence or conversations will help our support network serve you better.

4.3 Coast Guard Required Safety Equipment

Once you have reviewed safe boating guidelines and filed for registration, it is time to equip your vessel. The U.S. Coast Guard's (U.S.C.G.) list of required equipment is shown below.

- Audible Signaling Device (Bell, Horn, or Whistle)
- Fire Extinguisher
- Navigation / Anchor Lights
- Personal Flotation Devices (PFD's)
- Visual Signaling Devices

NOTICE

Remember to check with state and local agencies to ensure that additional items are not required to operate your boat in their waterways.

4.4 Recommended Safety Equipment

Although not required, there are several additional items which help to ensure safety, and provide convenience for you and your passengers. Perform an annual inventory to keep tools, spare parts, and safety equipment in good condition. Immediately replace any items that have been removed from the kit.

!!! CAUTION

Use only marine grade replacement parts. Most automotive and residential parts are not suitable for use in the harsh marine environment. Using them could lead to premature product failure, property damage, or personal injury.

4.4.1 Capacity Information

On all boats under 26' in length, the manufacturer is required to provide capacity information. If you own a model under 26' in length you will find a rectangular metal plate near the helm. This plate will provide information on horsepower ratings and total capacities which include person capacities, motors, and gear. As an owner you should be aware of the weight on board. Exceeding capacity can endanger your passengers and vessel, as well as void any warranty remaining on the boat should a failure occur. Remember that this is a guideline for normal operation, and does not release you from responsibility should an accident occur. You must use rational judgment when adverse conditions are expected, and reduce your loads to create a margin of safety.

This label means your World Cat is certified by the NMMA. With this tag, you are assured your fuel system, electrical system, lighting, ventilation, and steering are not only in compliance with the US Coast Guard regulations, but also meet the more stringent standards of the NMMA. The National Marine Manufacturer's Association is a national trade organization serving all elements of the recreational boating industry including manufacturers of boating equipment. With this tag, you can have confidence in the safety of your boat.



Pursuant to NMMA certification, all World Cats over 26' in length are "Yacht Certified" and carry the placard shown here. Person and gear capacities are not predetermined, they are left to the operator's discretion. Therefore, the amount of load allowed onboard should result from considering all safety precautions.



Horsepower ratings, however, are set by World Cat and *should not be exceeded*. The max horsepower rating for the 325CC is 800 HP. Exceeding the factory recommendation will result in loss of warranty coverage on your vessel.

4.5 Pollution Regulations

The Refuse Act of 1899 prohibits throwing, discharging or depositing any refuse matter of any kind (including trash, garbage, oil and other liquid pollutants) into the waters of the United States. This information is provided in a pamphlet that is normally received when registering your boat. Use the information below as a guideline, but study the pamphlet and understand any local regulations regarding pollution control. As the operator, you are also liable for individuals on your vessel disposing of materials in an improper manner.

4.5.1 Oil and Hazardous Substances

The Federal Water Pollution Control Act prohibits the discharge of oil or hazardous substances which may be harmful into U.S. navigable water. Vessels 26' in length and over must display a placard at least 5" x 8", made of durable material. The placard must be installed in a conspicuous place in the rigging compartments or near the bilge pumps and state the following:



4.5.2 Disposal of Plastics / Dunnage / Garbage

Boats 26' in length and over must display a Save Our Seas placard which outlines the rules for dumping waste offshore. The placards must be at least 4" x 9" and should be displayed in an area visible during normal operation. They can be purchased from your dealer or marine equipment suppliers.



4.6 Boating Safety Guidelines

As an owner / operator you should be prepared to handle any situation which arises before departure, while underway, or upon return to dock. Careful planning will add safety and pleasure to your experience and give you the confidence to handle emergencies if they develop. Listed below are some general guidelines which you should follow before any trip:

4.6.1 Pre-Departure

- Establish a float plan and provide it to a person whom you trust. The plan should give the details of your trip, including where you are going and when you expect to return. If you deviate from the plan, notify that person as soon as possible.
- If you anticipate operating in a new area, understand the local rules and request charts or information on any hazards you may not be aware of.
- If you are towing the boat, inspect the trailer including tires, lights, brakes, winch, and overall mechanical appearance.
- Verify that you have all necessary safety equipment. This should include all the USCG required equipment as well as spare parts or other items you decided to include.
- Check fuel levels and determine if you require additional fuel for your trip.
- Examine the weight of the gear on your vessel and make sure you are not overloaded. Distribute the weight evenly on your vessel to ensure predictable performance.

4.6.2 Launching

- Prepare your boat prior to backing down, (i.e. secure all loose items, install garboard drain), then launch your vessel and move away quickly.
- Move your vessel away from the dock and complete a full system check. Ensure that electronics, pumps, and safety equipment are in working order.
- Instruct a passenger on the operation of the boat, and the location and function of all safety equipment onboard. You should never be the only person capable of safely operating your vessel.

4.6.3 Underway (See Chapter 5 on Performance)

- Obey all “Rules of the Road” and any local regulations.
- Never operate a boat under the influence of alcohol or drugs.
- Do not allow individuals under the age of 16 to operate the vessel. Maintain direct supervision of inexperienced operators.
- Ensure that all passengers are safely seated while underway, and are using the hand rails World Cat has provided to remain securely in their seats.
- Use your electronics and judgment to remain abreast of changing weather. Storms develop quickly and you should be prepared to protect your passengers and vessel.
- Maintain a safe speed and respect other boaters as well as those on land. Obey all “No Wake Zones” and be aware of smaller vessels. The wake you produce could endanger other crafts and their passengers.
- Know the limitations of your craft and your experience. Understand the boat’s handling characteristics and do not attempt to operate the vessel in conditions that are unsafe or beyond your experience level.

4.6.4 Returning

- Obey navigational markers and be aware of any tidal changes since departure.
- Collect and dispose of refuse properly to maintain our waters for future generations.
- Prepare your boat for loading before moving to the dock. Quickly pull your vessel from the water and move away from the ramp to complete the preparation for trailering.
- Verify that trailer systems are working properly and all items are secured before leaving.
- Wash the boat and perform general maintenance upon returning home. (See instructions in Chapter 5).

As stated above, these are only general guidelines for safe boating. We recommend using these and any other available resources to protect your passengers as well as your vessel. Checklists can be an important tool in accomplishing this.

4.7 Trailering

Due to the nature of the hull, catamarans require specialized trailers. Your dealer will be able to provide them, as well as information on safe trailering practices. Tow vehicles should be rated to handle the load and stresses which accompany trailering your boat. A properly matched trailer should carry 5-10% of the total vessel weight on the tongue. Routine inspections should be performed on the vehicle and trailer prior to each trip, and thorough checks scheduled on an annual basis.

4.8 Anchoring

There are several types of anchors available, each designed to operate in specific bottom conditions. Your dealer can provide information on which styles are most effective in your area.

!!! CAUTION

Never anchor your boat off the stern. The weight at the transom, combined with adverse sea conditions, could allow water to enter the boat over the transom wall.

4.9 Shallow Water

Although your World Cat draws a small amount of water for its size, shallow water should be a concern of all boaters. To avoid this hazard, pay particular attention to navigational markers and know the area you are operating in. Be aware of tidal changes, including those that have occurred during your trip. Rocks, stumps, or other hazards are more prevalent in shallow water and can cause major damage to your hull bottom. Engines can also suffer damage if they are allowed to run in the sand or mud.

If you do become grounded, tilt the motors up to reduce the draft at the transom. Often this will solve the problem; however, it may be necessary to rock the boat from side to side to break the suction along the keel. If you are grounded on an incoming tide, allowing the water to rise can help. Being grounded on an outgoing tide is a larger issue and you need to act quickly to free your boat to avoid being driven further aground. Use the anchor to secure the boat and await the incoming tide, or use it to pull yourself free.

4.10 Emergency Situations

Unfortunately, even the safest boating practices cannot eliminate the potential of emergency situations developing. Therefore you should prepare yourself and your crew to handle any problems that may arise. Establish specific plans for fires, man overboard, collision, etc., and review them with your passengers prior to departing. Planning allows people to remain calm, and gives everyone the confidence to resolve the problem. Below is important information which all owners should be aware.

4.10.1 Emergency Stop Switch

Lanyard clips are provided on all World Cats and, when used properly, provide an emergency stop for the engines should the driver fall from the helm position, or need to perform an emergency shutdown to respond to or avoid an accident. The clip attaches the driver to the ignition panel using a cord. A pull on the cord will release the clip from the shut-off switch on the panel and shut down the engines. To restart the engines, turn ignition switch to the off position, return binnacle to neutral position, insert safety lanyard back into clip and then turn ignition switches back on. This should only be used to prevent or react to accidents, and the operator is solely responsible for the decision.



4.10.2 Communication

If you witness an emergency or become involved in one, you should request assistance via radio communication or visual signals.

4.10.3 Rendering Assistance

Owners are required by law to render assistance to other boaters involved in an emergency situation such as fire, collision, casualty, etc., as long as it does not endanger your vessel or its passengers.

4.10.4 Reporting Accidents

Federal regulations require that operators involved in an accident file a written account of the situation within 48 hours. Reports should be submitted to the State Boating Law Administrator. You can obtain forms through the USCG or local authorities (i.e. harbor patrol, sheriff or police offices). In the event that a casualty or disappearance occurs as the result of an accident, you must notify the authorities immediately by phone or radio and fill out a written statement.

4.10.5 Weather

Pay attention to weather patterns. If you find yourself in the path of a storm, seek shelter immediately. If you cannot reach a dock, seek refuge inside the boat while the storm advances. Never get in the water and stay clear of metal components on your boat. If lightning strikes, it would likely pass through metal objects seeking a ground.

4.10.6 Towing Due to an accident or loss of power, it may become necessary to tow another vessel or have your boat towed. If you are providing assistance, never attempt to tow a boat larger than your own. Be certain to use proper lines (ropes) and rational judgment to prevent further damage. Tow lines are under heavy strain, therefore passengers should remain clear of the lines to protect themselves from injury. .

4.11 Carbon Monoxide (CO)

!!! DANGER

Carbon Monoxide (CO) is a colorless, odorless, and tasteless gas produced by the exhaust system of any combustible engine. CO can cause brain damage or death if inhaled over an extended period of time. To protect yourself and your passengers, never block the ventilation outlets in cabins, consoles, or other enclosed spaces.

One of the most important considerations when dealing with boating safety is carbon monoxide. Commonly referred to as CO, carbon monoxide is a colorless, odorless, and tasteless gas emitted from any engine exhaust. Including inboards and outboards. A CO particle is close in weight to the air we consume; therefore it does not rise or fall in the atmosphere, but accumulates in enclosed spaces. Boat owners with enclosed heads, cabins, or canvas enclosures should pay particular attention to CO. Be aware that fumes produced on your boat can affect other vessels and other boats can affect you. A primary concern is the use of generators when boats are moored adjacent to each other.

Carbon Monoxide is poisonous and potentially fatal if inhaled over an extended period of time. Symptoms of CO poisoning include:

- Dizziness
- Nausea / Vomiting
- Headache / Throbbing in the temples
- Fatigue
- Muscular twitching
- Inability to focus or think clearly

If you or any of passengers experience any of these symptoms, leave the area and find a source of fresh air immediately. If your symptoms persist, seek medical attention.

Chapter 5: Performance

5.1 Overview

This chapter will provide information on the performance characteristics of your catamaran; this is not a substitute for seamanship training or hands-on experience. First time boat owners should use the resources detailed in Chapter 1 to learn proper methods of boat operation. Experienced boaters who have never owned a catamaran should study this chapter completely. Do not assume that previous boating experience will apply to all situations, as there are several subtle differences in the handling characteristics of twin-hulled boats. For existing catamaran owners, this chapter should be a reference.

5.2 Motor Trim


The smooth riding characteristics of a catamaran are a result of the twin hull design. Their ability to slice through oncoming waves is far superior to the slamming characteristics seen on conventional vessels. Motor trim plays an integral part in how your catamaran accomplishes this. In a level or bow down attitude, your boat will slice through larger chop, but you may experience sluggish performance, a wetter ride and increased bow steering in a following sea. In a bow up attitude the boat will perform better, but may ride less smoothly. Experiment with the trim settings in various sea conditions to determine what you are most comfortable with. When using the trim to correct a listing condition, imagine an “X” connecting the starboard engine to the port bow, and port engine to the starboard bow (see drawing below).

5.2.1 Bow Up Condition

To correct a bow up condition on the port sponson, adjust the motor trim “down” on the starboard engine. This will help the starboard sponson to rise and level the vessel. If moving to the lowest trim setting on the starboard engine does not correct the list, trim the port engine “up” to assist the change. Reverse the instructions to accommodate for a bow up condition on the starboard sponson.

5.2.2 Bow Down Condition

To correct a bow down condition on the port sponson, adjust the motor trim “up” on the starboard engine. This will help the starboard sponson to fall and level the vessel. If cavitation occurs on the starboard engine, lower it to correct the problem, then trim the port engine “down” to assist the change. Reverse the instructions to accommodate for a bow down condition on the starboard sponson.

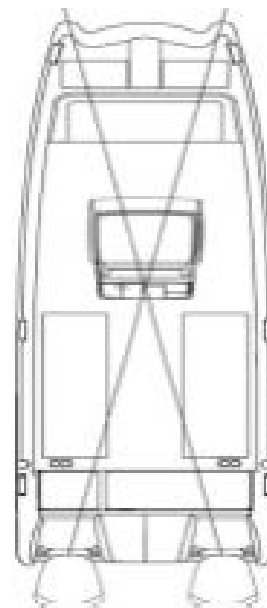

5.3 Engine Controls

All factory rigged boats will come equipped with a binnacle control specific to your type of engine. Located at the helm, the binnacle controls the throttle, shift, and trim mechanisms for your engine. Also read the owner's manual provided by your engine manufacturer to determine how to operate the features on your binnacle. If any components of this system need to be replaced, be certain to use the same style and length as the original equipment.



5.4 Steering Controls

Catamarans offer unsurpassed steering control. The wide spacing of the engines, advanced steering components, and handling characteristics of the World Cat hull give operators exceptional maneuverability in even the tightest spaces.

Because of the superior tracking abilities of the World Cat hull, oversteering can present a problem, especially for owners accustomed to operating conventional boats. Conventional vessels have a tendency to lose tracking abilities in rough and following sea conditions, making constant course corrections necessary. However, catamarans do not exhibit those traits and require operators to take a “hands off” approach. To do so, relax your grip and fight the urge to make constant corrections.

5.5 Steering Maintenance - Twin Engines

In order to maintain the excellent steering characteristics of your boat, occasionally you will need to visually inspect all hoses and fittings for leaks and fluid levels. We also recommend checking your steering cylinders to ensure all bolts and nuts are still tight.

In order to maintain the excellent steering characteristics of your boat, occasionally you will need to adjust the steering system to realign the motors (known as motor toe). To do so follow these instructions:

- Using the helm, center the starboard motor.
- Find the steering system valve, located under the inspection port on the center of the transom.
- Open the valve by rotating it 90 degrees (the handle will be parallel to the valve body when open). This will isolate the port engine, so that it can be adjusted manually.
- Center the port motor manually; then close the steering system ball valve and reinstall the inspection port.

Similar to hydraulic braking systems in an automobile, it may become necessary to bleed the steering system occasionally to remove air from the lines. We have provided a diagram of the steering system in this chapter, and the Teleflex™ owner's manual in your Owner's Portfolio. Use these resources, and your dealer, to keep the steering system in excellent working order. Be aware, these are routine maintenance procedures and are not covered under warranty by World Cat.

!!! CAUTION

Routinely check hydraulic fluid levels and all connections for leaks or any sign of mechanical failure. Lubricate all mechanical parts at least annually with high quality marine grease. Failure to do so may result in impaired or unresponsive steering.

5.6 Power Steering System Diagram

The power assist unit provides automobile like steering on your catamaran. The unit is installed in the console between the helm and steering rams. The power for the unit is connected to the port and starboard key switch. If you choose to troll with only one engine your power assist will still be operational.

NOTICE

If possible, have your dealer or trained marine technician perform routine maintenance or repairs on your steering system. Replace faulty parts immediately.

5.6.1 Power Steering System - Bleeding Instructions

Reference the bleeding instructions provided by the SeaStar Solutions® owner's manual, which is included in your Owner's Portfolio. Use them in conjunction with the instructions and diagram below to bleed the steering system. This should be done annually or when air is detected in the system.

Step 1

- With the Power Purge turned "OFF", attach helm fitting and leads.
- Attach one of the leads to the bleeder valve on the Power Assist Pump.
- Open the bleeder valve using a 5/8" wrench.
- Turn the Power Purge unit "ON".
- Watch for air bubbles in the clear hydraulic lines. Once no more bubbles can be seen and there is a steady flow of hydraulic fluid through the lines, allow the Power Purge to run for an additional 60 seconds.
- The helm is now full of fluid. Turn Power Purge "OFF". Close bleeder valve and disconnect line from the Power Assist Pump. Place dust cap back on bleeder valve.



Step 2


- Attach the four lines to each of the bleeder valves on the steering cylinders.
- Open each of the four bleeder valves.
- Turn Power Purge "ON".
- Turn the steering wheel slowly 20 times clockwise, then slowly 20 times counter-clockwise.

Step 3

- With Power Purge turned "ON", move both engines through their full range of motion (This will help remove any air bubbles still trapped inside the cylinders).
- As a final precautionary step, pull on the engines firmly at the ends of their normal range of motion (This will also help to insure all of the air is out of the cylinders).


Step 4

- Turn the ignition key for the port engine "ON". This will turn the Power Assist Pump "ON".
- Repeat "Step 2".
- If no more bubbles can be seen then the bleeding is complete. Turn the Power Purge "OFF". Close all four bleeder valves. Disconnect the four lines from the cylinders and both lines from the helm. Remove the helm fitting and replace it with vent cap.
- If bubbles are still present in lines, then bleeding was not successful. Repeat entire process.

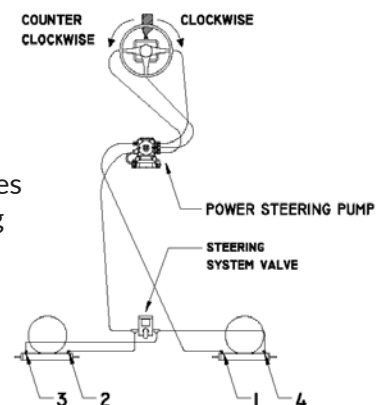

6.10.21 Optimus Electronic Power Steering Package (Standard)

The Optimus Electronic Power Steering package provides increased comfort, lighter steering loads and car-like steering response when on the water. See the Optimus EPS user's manual for additional information.

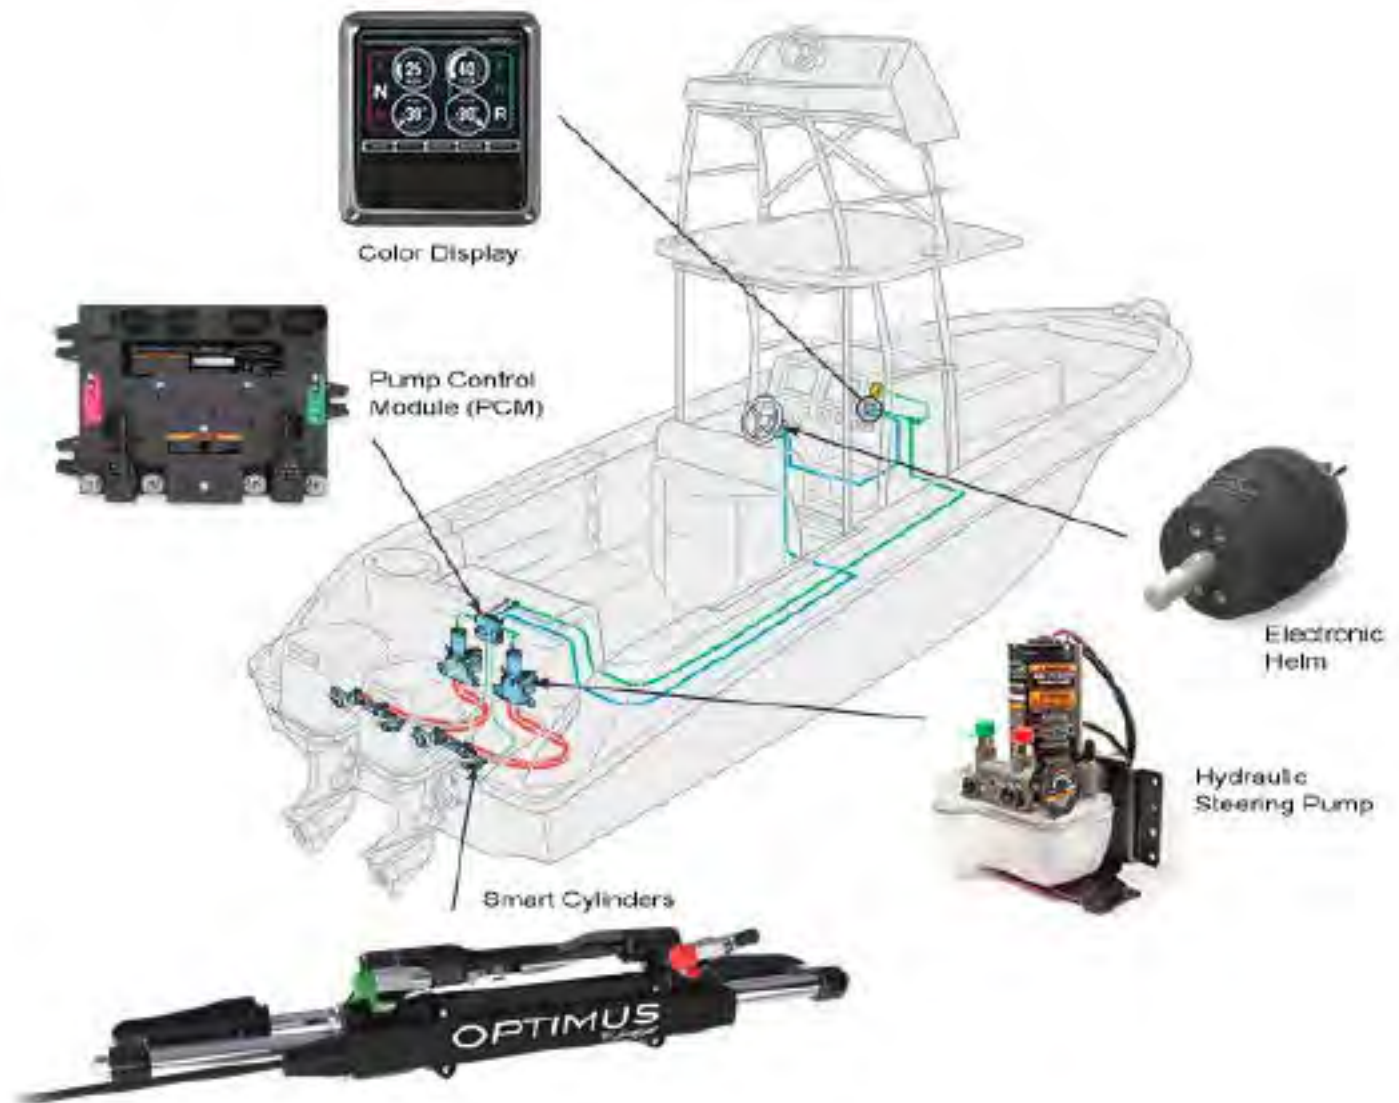

Features:


- User adjustable speed sensitive helm turns, wheel effort and steering response
- Fault tolerant CAN Bus network
- Sealed, locking cable connections
- On-demand hydraulic steering pumps
- Rigged with Kevlar-reinforced hydraulic hoses
- Adjustable stainless steel ORB fittings on the SmartCylinder
- Redundant systems for fail-safe operation

6.10.22 Optimus 360 with Electronic Steering, SeaStation, Joystick, and SeaWays Autopilot (Optional)

The Optimus 360 package includes Electronic Power Steering, Electronic Joystick Control System, and Seaways Autopilot. Using state-of-the-art electronics, it provides easy 360 degree maneuvering capabilities when docking, negotiating crowded areas, or loading a vessel onto a trailer. See the Optimus 360 user's manual for additional information.

Optimus 360 System Schematic

Optimus EPS + Joystick =
Optimus 360 Joystick Control

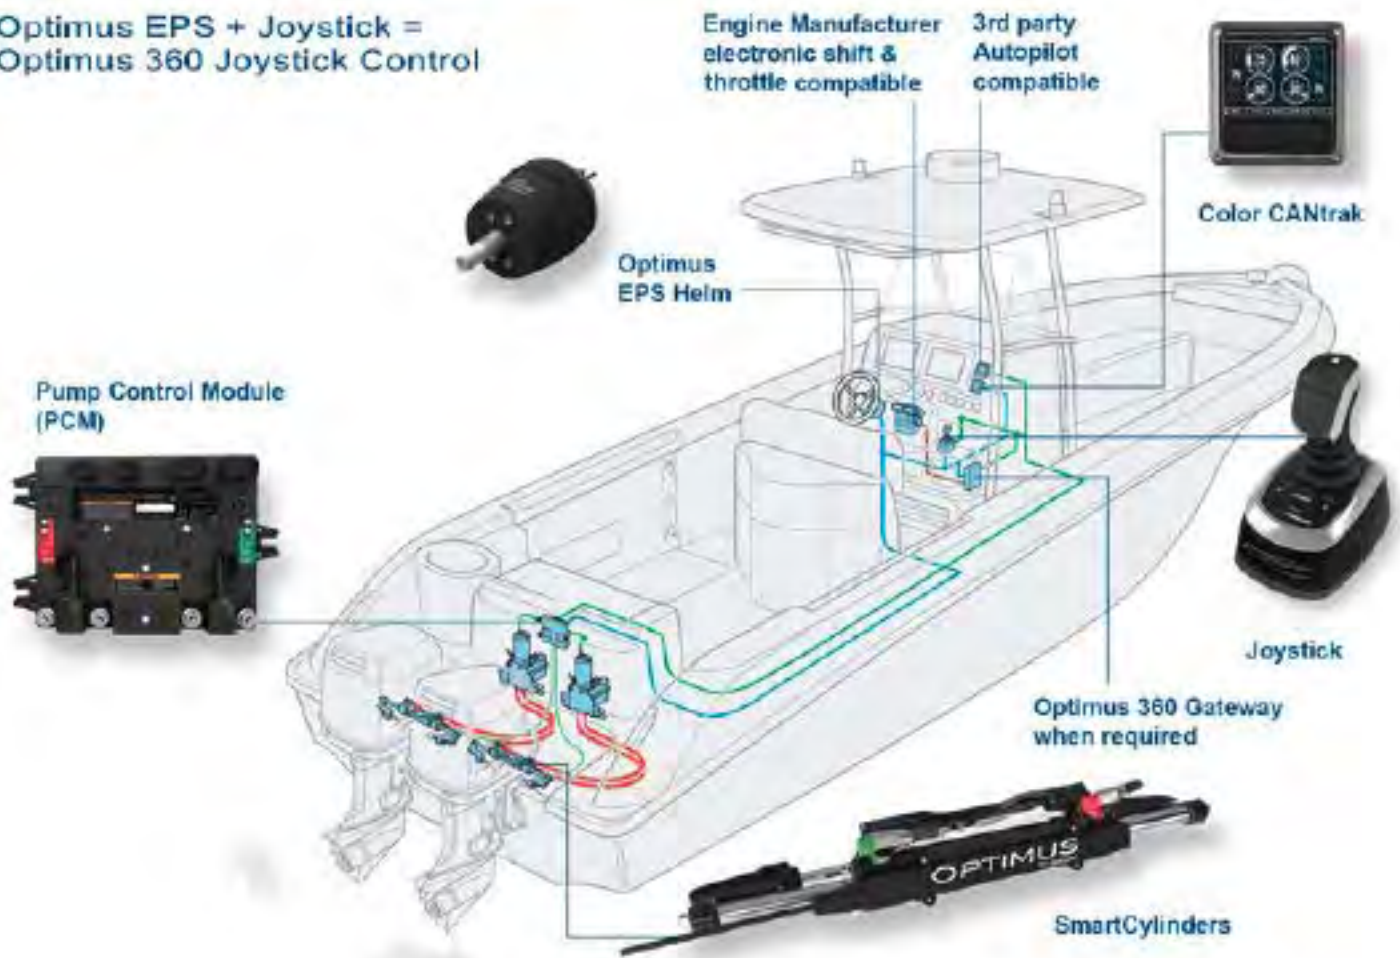

Features:

- Three axis joystick with guided feel and boost mode
- Unique joystick design with a focus on user ergonomics and harsh marine environments
- User adjustable speed sensitive helm turns, wheel effort and steering response
- Fault tolerant CAN Bus network
- Sealed, locking cable connections
- On-demand hydraulic steering pumps
- Rigged with Kevlar-reinforced hydraulic hoses
- Adjustable stainless steel ORB fittings on the SmartCylinder
- Compatible with 3rd party autopilot systems
- Redundant systems for fail-safe operation
- Adjustable stainless steel ORB fittings on the SmartCylinder
- Redundant systems for fail-safe operation

HELM MASTER® EX OVERVIEW



Your World Cat comes standard with Yamaha's Digital Electric Steering (DES). Yamaha's DES is a compact steering device that replaces hydraulic steering systems. It works like a typical power steering system but without the hassle of maintaining hydraulics. There are no pumps, valves, hoses, or external Steering Control Units. Please refer to your Yamaha Helm Master EX Manual for more information.



Auto Pilot Panel

Full Maneuverability(Auto Pilot, Joystick)

Helm Master EX features the Yamaha Autopilot. A boat builder or dealership can easily add Yamaha Autopilot to the system by inserting a new panel in the console, adding a Heading Sensor, GPS antenna, Boat Control Unit (BCU), and related harnesses. Only Yamaha Autopilot is compatible with Yamaha DES. Please refer to your Yamaha Helm Master EX Manual for more information on how to operate the auto pilot functions. Helm Master EX option also features the Yamaha Full Maneuverability Joystick, which provides the captain with ease of operation in a variety of environments and applications. A boat builder or dealership can easily add Yamaha Joystick to the system. The joystick gives the captain ability to control shifting, steering, and throttle control with a thin, functional and ergonomic design. The joystick can control auto pilot heading, course, and speed changes. For more information, please refer to your Yamaha Helm Master Manual.

Propeller Lights

For any boat configured with the Full Maneuverability Joystick, propeller lights are installed on the stern. These lights serve to warn swimmers of an outboard motor activating at any time.



Joystick

!!! WARNING

When the Joystick is active, the propeller lights will be illuminated as a warning, no one should enter the water or approach the boat.

5.7 Handling Characteristics

World Cat's patented VectorFlo™ hull is a planing hull, Planing hulls provide speed and economy of operation since a limited amount of the hull is in contact with the water. Our proven design provides a superior ride, excellent handling characteristics in a variety of conditions, and speed with economy of operation. To help you experience "The Ultimate Ride", study the following sections.

5.7.1 Turning Characteristics

Turning a catamaran is slightly different than cornering on a conventional vessel. Imagine the difference between an automobile and a motorcycle: Automobiles take turns in a flatter, more stable manner similar to a catamaran hull, while motorcycles pitch hard into a turn similar to a monohull. Do not underestimate a catamaran's cornering ability. Hard adjustments to the steering wheel can make a World Cat bite quickly and execute high-performance turns. Experiment with the handling ability of your cat so you are prepared for any situation on the water.

5.7.2 Adverse Sea Conditions

Catamarans are designed to handle some of the roughest waters in the world, but that is no substitute for common sense. As an operator, you are responsible for the safety of your passengers and vessel; therefore, your trips should be limited by your level of experience. Planning and paying constant attention to the weather and sea conditions is paramount. If you are forced to operate in dangerous seas you can be confident that your World Cat, when operated properly, can handle them safely.

Here are a few tips on how to handle your boat in adverse sea conditions:

- When traveling into the wind, changing your direction a few degrees to allow one sponson to settle before the other, can make the ride smoother and allow for increased speed.
- In a rough chop with short wave intervals, increasing your speed may allow the boat to skim across the tops of each wave. This will result in a smoother ride.
- Steer to avoid larger swells and breaking waves.
- In a following sea, position your vessel on the back of a wave and match its speed to remain ahead of the trough. Speed is paramount. Work the throttle to avoid going over the wave or being thrown down the face of a following wave.

5.7.3 Cross-Clutching - Twin Engines

World Cat 325CC twin engines are mounted at a specific distance, based on the configuration of the boat, allowing you to cross-clutch (one motor in forward while one in reverse).

To dock, reverse the boat into a slip: put the outside motor in reverse and turn to face aft. Keeping the wheel straight, steer with the inside motor putting it in forward and reverse to guide you into the slip. Keep it simple and slow.

5.7.4 Get the Boat on Plane

- Trim both engines down (the motors act as trim tabs forcing the bow down).
- Quickly increase speed to get the boat on plane then slow down to 3500 RPM's.
- Adjust trim up until the motors cavitate, then tap trim down.
- Feel / hear the motors and do not watch the trim gauges.
- A smooth ride is more important than having your engine RPM's synchronized.

5.7.5 Keep the Boat Level (if the seas change or people move on the boat)

Trim the **High-Side-High**. When one side of the bow is high compared to the horizon, simply trim the high-side motor up. (If it cavitates then trim the **low-side-low**). Different models have different sensitivity to trim (do not over-correct as this may cause the boat to pitch in flat calm water at high speeds)

5.7.6 Handling Different Sea Conditions

- **Head Sea:** trim motors down to keep the bow down.
- **Following Sea:** trim up to keep the bow out of the water.
- **Calm water:** trim engines up to run on the back of the hull.

5.7.7 Boating Tips

Experience is the best way to determine the handling characteristics of your catamaran. Operating the boat in multiple sea conditions and under various loads will help you predict how the boat will perform in any situation. World Cat provides the following recommendations regarding the performance of your catamaran:

- Establish an RPM chart which details the speed and fuel consumption at various RPM levels to achieve the most economical operation.
- Monitor fuel gauges to determine the amount of operating time remaining at a given reading.
- Determine minimum speed for effective steering in close quarters.
- Determine the turning radius required at various speeds.
- Determine the rates of acceleration and deceleration with various load conditions. Include the distance required to stop the boat at various speeds.

5.8 Performance Factors

Proper setup and maintenance of the systems on your boat is important to ensuring proper performance, but be aware they are not the only factors which affect it. Several things which contribute to the level of performance of your catamaran can change between or during trips.

5.8.1 Engine Efficiency

Without proper maintenance, your engine(s) will gradually lose power, resulting in a loss of speed. Use the recommendations in the engine's owners manual to schedule routine maintenance procedures and as a guide for the correct RPM range for your engines. Neglecting to do so may result in loss of performance and an increased risk of failure.

5.8.2 Propeller Condition

The size and condition of your propeller also plays a major role in the performance of your catamaran. A damaged propeller can result in lower speeds, sudden drops in RPM, increased fuel consumption, and severe vibration while running. Improperly sized propellers can cause damage to your engine as a result of exceeding the maximum or minimum RPM levels.

5.8.3 Weather Conditions

Barometric pressure and humidity can affect the output of your engines. For example, on an extremely hot and humid day, your engine can experience as much as a 10 percent loss in horsepower. Although you should monitor your engines' performance, be aware that the weather could be a major factor in your boat's performance.

5.8.4 Load

Increased load can affect performance, especially if the load is unbalanced. Passengers, gear, and fuel are all examples of things which can affect your vessel. Fuel levels change throughout the day, and greatly affect the attitude of your boat. When necessary, make adjustments to engine trim and load distribution to compensate for fuel usage.

5.8.5 Marine Growth

If you store your boat in the water or fail to clean it after each trip, the existence of marine growth can contribute to a loss of performance. A decline in speed or increased fuel consumption can occur. Prevent this by applying a marine growth inhibitor or by cleaning your boat thoroughly after each trip.

5.8.6 Bottom Paint

Bottom painting your catamaran will also change the performance. Although not significant, you can expect a drop in speed between 1 and 5 miles per hour.

Chapter 6: Systems Information

6.1 Overview

This chapter will provide you with basic information for all the systems on your boat. Understanding this information is imperative, as it directly contributes to the safety and enjoyment of your trips on the water. Talk with your dealer if you need further information on any of these systems.

6.2 Fueling Guidelines

Study the following guidelines thoroughly, and consult your dealer if you have questions. Be sure to read the engine manufacturers recommendations regarding the type and grade of fuel to use for your engines.

!!! WARNING

Avoid methanol or other alcohol based fuels or additives which can deteriorate fuel hoses. Alcohol-based fuels also absorb water which can lead to engine damage.

!!! DANGER

Follow all safety guidelines while fueling. Leaking or spilled fuel is an explosion hazard. Regular checks of the fuel system are needed to protect you and the vessel.

!!! DANGER

Static electricity can ignite gasoline vapors causing serious injury, death and /or destruction of property.

6.2.1 Before Fueling

- Shut down the engines and turn off all electrical devices including the batteries.
- Close all hatches, port lights, and doors to prevent accumulation of fuel vapors.
- Extinguish cigarettes or other lighted materials.
- Keep a properly charged and correctly rated fire extinguisher nearby.

6.2.2 During Fueling

- Use common sense and obey all safety regulations related to fuel handling.
- Avoid static sparks by maintaining contact between the fuel nozzle and fuel fill.

6.2.3 After Fueling

- Secure the fuel cap and inspect for leaks.
- Clean up any spilled fuel and dispose of the cleaning material accordingly. Do not store fuel-soaked material on your boat.
- Open all hatches, port lights, and doors to allow for ventilation.
- Check for fuel vapors using a "sniff test" and do not turn on electrical devices, including batteries, until you are certain the fumes have dissipated.

6.3 Fuel System

Due to the nature of the hull design, your World Cat 325CC is equipped with separate port and starboard fuel systems. These systems act independently, providing fuel to the engine on their respective side. Tanks are constructed of polyethylene material to prevent corrosion.

Hoses are NMMA certified, and fittings are clamped securely to reduce the potential for leaks. However, comprehensive checks of hoses and fittings should be completed at least annually, including those normally hidden from view. Tighten all connections, replace deteriorated hoses, clamps or fittings, and, if necessary, replace the fuel / water separators during this check. World Cat has provided inspection plates (in the cockpit floor) to assist you with annual maintenance.

If you experience fuel flow problems, remove the fuel feed hose from your engine and connect it to a portable fuel tank. Doing so will help you determine if your fuel system or the engine is the source of the problem. Fuel system repairs and engine maintenance should be performed by a qualified marine technician.

The fuel / water separators are installed between the tank pickup and the engine. They are located in the aft rigging space. Inspect these filters regularly and replace when needed.

6.3.1 Fuel System Benefits

- Automotive-style refueling.
- Automotive Nozzle shut-off for overfill protection – reducing the possibility of accidental fuel spills.
- Fuel nozzle retention.
- Reduces hydrocarbon emission through the use of specially designed fuel fill. The fuel fill has a permanently attached cap incorporating a positive closure mechanism with an audible click, to let you know when the cap is sealed.

6.3.2 Fuel Tank

Your boat is equipped with two low permeation crosslink polyethylene fuel tanks, each with a net fuel capacity of 139.5 gallons. The usable capacity of each fuel tank is different from the tank capacity marked on the tank from the manufacturer. The difference is the accommodation for the unfillable area that has been incorporated into your tank. It is recommended that you follow all of the instructions regarding the filling of fuel tanks.

6.3.3 Fuel Vent

The fuel tank vent is integrated into the fuel fill deck fitting (See fig. 6.3.6) The vent serves as an over pressure / vacuum release with anti-surge and flame / spark arresting protection. The fuel vent system also plays an important role in controlling the "FULL" level of fuel with the use of FLVV (Fill Limit Vent Valve). Grade Valves have been added to the tank which allows proper ventilation of the tank when the boat is stored, or trailered, on a moderate incline, without fuel. Always inspect to insure that the fuel fill deck fitting is free of debris and in proper working condition.

6.3.4 Fuel Distribution System

The fuel is delivered from the tank to the engine through the “Integrated Fuel Demand Valve” (IFDV), anti-siphon valve, and the fuel line. The IFDV prevents built up pressure inside the tank from being transferred to the engine, while still allowing fuel to flow to the engine for operation. The anti-siphon valve is a safety feature designed to prevent the fuel from siphoning out of the tank if the fuel line were to be cut or broken below the level of the fuel in the tank. Some fuel would still leak from the line, but the valve will not allow the entire contents of the tank to siphon into the boat.

What does the IFDV do?

The integrated fuel demand valve, used in conjunction with integrated fuel systems, is for below-deck use, eliminates pressurized fuel from reaching fuel distribution lines / the engine, and ensures that fuel is provided to the engine on demand rather than as a result of pressure in the tank. Additional features include:

- Compatible with Ethanol-blended fuels
- Eliminates the need for rigid fuel distribution lines in pressure relief systems (per ABYC H-24, 15.9)
- 2-year warranty

6.3.5 Filling Fuel Tanks

The fuel system is designed to automatically shut off the fuel nozzle when the tank is full via the “Inlet Control Valve”, (See Fig 6.3.6) similar to an automotive fuel system. The tank is filled when the fuel fill nozzle has shut itself off the second time. Attempting to fill the tank past this point may cause some of the components to not function properly, or malfunction.

!!! WARNING

The use of a portable fuel tank to fill your fuel tanks can result in overfilling and circumvent the safe features designed into our fuel tank system.

!!! WARNING

Modification of any of the fuel system components or the replacement of these components with unauthorized parts may result in over-pressurization of the fuel system and circumvent the safety features designed into your fuel system.

6.3.6 Pressure Relief Fuel System Diagram



6.3.7 Troubleshooting Tips

Possible Failures

Loss of prime on the engine and / or fuel starvation:

- Engine stalls out
- Engine runs lean
- Engine does not draw fuel properly

Find possible leakage points and take corrective action:

- Fuel line leak from tank to engine—replace components as needed
- IFDV O-Ring—replace O-Ring
- Pick-up Tube O-Ring—replace O-Ring
- IFDV—replace IFDV

6.3.8 Integrated Fuel Demand Valve Components



6.4 Ethanol-blended Fuel

Ethanol is an oxygenated hydrocarbon compound that has a high octane rating, therefore it is useful in increasing the octane level of unleaded gasoline.

NOTICE

The use of improper gasoline or additives can damage your fuel system and is considered mis-use of the system. Damage caused by improper gasoline or additives WILL NOT be covered under warranty.

6.4.1 Additives

World Cat exclusively powers every new boat with Yamaha Outboards. Under its *Maintenance Matters* program, Yamaha recommends the following additives be used to maintain your new outboard at top performance: **Yamalube Fuel Stabilizer & Conditioner** to protect against the damaging effects of today's ethanol fuels and **Yamalube Ring Free** to prevent carbon buildup.

See your Yamaha owner's manual and your authorized Yamaha dealer for more detailed maintenance instructions.

6.5 Electrical System

The electrical system on your catamaran consists of three major components: the battery system, wiring and circuit protection, and accessories. It is important that you understand the principles of the electrical system so that you can protect the components and troubleshoot any problems you experience.

6.5.1 Battery System

Your World Cat is equipped with four batteries. Two of the batteries are dedicated as "cranking batteries" while the other two are "Deep Cycle batteries", commonly referred to as the "house bank," controls the DC accessories. To help maintain your batteries, a management system is installed on your boat. This system enables you to engage or disconnect the batteries, distribute electrical charge, and parallel batteries in the event of a failure.

!!! DANGER

Disconnect the battery cables from the batteries prior to removing or working on the battery management panel. Failure to do so could result in electric shock. Reference the NMMA pamphlet in your Owner's Portfolio for more information.

6.5.2 Battery Distribution

This photo illustrates the battery management panel. The PORT START, STBD START, and HOUSE switches as well as the DC MAIN breaker are in the "OFF" position and the EMERG PARALLEL is "OFF". In the "ON" (turn clockwise) position, you are supplying power to the engines through the cranking leads and to the DC accessories through the 50 Amp DC MAIN breaker.

NOTE: Only turn the EMERG PARALLEL switch on when needed.

Important: When you have finished your trip, turn the PORT START, STBD START and HOUSE switches off prior to leaving the boat. The DC MAIN can remain "ON" at all times.



6.5.3 Emergency Parallel

In the event of a battery failure, the “EMERG PARALLEL” switch allows you to mechanically link the port “cranking” battery to the starboard engine or vice versa. The switch should remain in the “OFF” position when not in use. To prevent voltage spikes or drops which can damage electrical components, you cannot draw power from the house battery using the “EMERG PARALLEL” switch.

!!! DANGER

All batteries contain an electrolyte, commonly sulfuric acid, which is a caustic and volatile chemical. Use extreme caution when charging or servicing.

6.5.4 Voltage Sensor Relay (VSR)

The twin voltage relay sensors are integrated into the battery switch cluster. They distribute the charging output from the engine alternator to the “cranking” and “house” batteries. After starting an engine, the alternator sends electricity back to the “cranking” battery to recharge it. Once the “cranking battery” is fully charged (13.6 volts), the VSR closes to allow the alternator output to charge the “house” battery. When the VSR is operating, the LED indicator located on the management panel will be lit. It will remain lit until the battery is fully charged, or the “cranking” battery voltage falls below 12.8 volts. It is common for the VSR to cycle “ON” and “OFF” during operation. However, constant cycling could indicate a problem in the system and should be checked by your dealer.

6.5.5 24 Hour Circuits

The fuse holders located at the batteries protect the 24 hour essential circuit wiring. Per NMMA and USCG guidelines, these fuses are constantly energized to provide power for bilge pumps and memory functions. This helps to protect your vessel even when you are not available. The battery switch does not need to be “ON” for these fuses to have power. Inspect the fuses regularly. If a fuse blows constantly, have your dealer investigate the problem as soon as possible to prevent damage to your boat.

6.5.6 Anchor Windlass

A 50 Amp breaker is installed at the factory for the anchor windlass. For Windlass Deck Switch Maintenance refer to pages 47 & 48 for details provided by Lewmar.

6.6 Battery Selection

World Cat supplies the original batteries onboard your vessel. We use both Group 27 and Group 31 batteries. In the event of a failure, replacements must be of equal size and specifications (see below):

GROUP 27 (Cranking Battery)

CCA: 800

MCA: 1000

RESERVE CAPACITY: 182 Min @ 25A

GROUP 31 (Deep Cycle/House Battery)

CCA: 675

MCA: 845

RESERVE CAPACITY: 210 Min @ 25A

6.6.1 Battery Care

Batteries should be secured in a non-metallic tray and insulated boots should cover the terminals.

Depending on the style of battery you choose, inspect the electrolyte and perform routine maintenance as suggested by the manufacturer. Remove corrosion from the terminals quickly to prevent failure. Use a stiff brush and a solution of water and baking soda to remove corrosion, then grease the terminals to prevent further build-up. Be careful to clean up thoroughly to avoid contaminating the electrolyte.

When servicing the batteries, follow the safety procedures shown below and work to avoid electrolyte spills which can harm you and your vessel.

!!! DANGER

All batteries contain an electrolyte, commonly sulfuric acid, which is a caustic and volatile chemical. Use extreme caution when charging or servicing.

6.6.2 Safety

- Use protective clothing and accessories such as aprons, gloves, and eye wear to protect yourself while servicing batteries.
- Avoid cigarettes, open flames, and sparks. Batteries can produce toxic and explosive gases; therefore, store or charge them in a well-ventilated space.
- Keep batteries out of the reach of children and pets.

6.6.3 Exposure

If you are exposed to the electrolyte solution, follow these procedures and seek immediate medical attention.

EXTERNAL - Flush with large amounts of water for contact with the skin. If severe irritation occurs or it contacts your eyes. Seek medical attention immediately.

INTERNAL - Consume large amounts of water or milk, coupled with milk of magnesia, a beaten egg, or vegetable oil. Seek medical attention immediately.

The guidelines above are basic and do not alleviate the owner of responsibility should an accident occur. Use good judgment and common sense to avoid an accident.

!!! CAUTION

When reconnecting your batteries, always connect the red cable to the positive terminal and the black cable to the negative terminal (in that order). Reversing them can damage your electrical system and create the potential for electric shock.

!!! CAUTION

Never disconnect a battery while underway. Doing so may result in damage to your boat's electrical system and the engine's alternator.

6.7 Wiring and Circuit Protection

Your World Cat is wired using marine grade tin coated copper wire instead of standard copper wire. Tin coated copper is manufactured to withstand the harsh saltwater environment better than standard copper, which is used for residential applications. Environmentally sealed Deutsch™ connectors are installed on all accessories located below the waterline to ensure watertight connections. The remaining devices are installed with high quality splices and terminals, which are heat shrunk to protect the integrity of the connection. Harnesses are routed through PVC rigging tubes to prevent chafing and covered with sheathing when necessary.

6.8 Control System

Your World Cat is equipped with a traditional switch operated DC control system. In the traditional setup, circuit protection is located above the switches on the instrument panel. A label is mounted on the control unit to advise you which breaker controls a given appliance. If a breaker trips simply push it in to reset. When possible, have your dealer replace defective electrical components. If that is impractical, be certain to use identical replacements to ensure the integrity of the system.

Accessories not integrated into the control unit can include lights with integrated switches, marine head controls, stereos, aftermarket electronics and 12V outlets. These devices draw current from the accessory fuse blocks. The fuse blocks are similar to those found in automobiles, and use blade style fuses to protect a circuit. You can obtain replacements for these fuses from your dealer or local auto parts store. Always replace a damaged fuse with one of equal rating.

!!! CAUTION

When working on your electrical system, disconnect the batteries to prevent shock, or damage to your electrical system. If possible, have an electrician perform repairs.

!!! CAUTION

Failing to use the correct replacement breaker could result in failure of the device or damage to the electrical system. Contact your dealer for repair information.

Ground blocks are another integral part of your electrical system. These are connected to the common battery ground and individual appliances to provide a path for current flow back to batteries.

For customers unfamiliar with electrical systems,
World Cat recommends the following book:

Boating Magazine's: Powerboater's Guide to Electrical Systems

Written by: Ed Sherman

Publisher: International Marine (Division of McGraw Hill Companies)

Copyright: 2007 International Marine

6.9 Dash Switch Panel

The dash switch panel is located just below the helm in the cockpit. It controls the lights, pumps, and other accessories on your 325CC.



6.10 Accessories

Electrical accessories include all lights, pumps, and gauges assembled into your World Cat. Certain accessories are standard to each model, while others are optional equipment. Below is a list of accessories and their function.

6.10.1 Navigational Lights

Per USCG guidelines, all powered vessels must have navigational and anchor lights. Your World Cat is equipped with navigational lights at the bow and a anchor light on the hardtop. These lights must be used in accordance with USCG regulations when anchored or underway.

6.10.2 Cockpit Lights

Cockpit lights are located at floor level to provide light while operating in low light conditions.

6.10.3 Cabin / Console Lights

Lights located in the cabin or in consoles have an integrated power switch and are tied directly into the fuse block. Operate them with the switch located at the base of the light.

6.10.4 Spreader Lights

Attached to the hardtop or hardtop frame, spreader lights illuminate the cockpit in low light situations. They are operated using the switch on the dome light or instrument panel and are protected by a fuse block.

6.10.5 Overhead Lights

This light features both white and red lamps for nighttime operation. It is powered by the fuse block located in the radio box.

6.10.6 Bilge Pump / Float Switch

Your 320DC is equipped with two 1500 GPH bilge pumps and two 500 GPH bilge pumps. Each pump is connected to a float switch which automatically triggers the pump when water comes to rest in the bilge. The float switches are connected to the battery management panel and receive power from the breaker along the top of the panel. These breakers are constantly energized and ensure the safety of your boat even when the battery switches are in the "OFF" position. The pumps can be manually engaged using the switches located on the dash.

Inspect the operation of your bilge pumps and their connections at least annually. To do so, activate the pump by momentarily lifting the arm on the float switch, then check the operation using the switches at the helm. When testing, do not allow the pumps to run dry for more than two to three seconds. Extended dry operation can result in damage to your pump. Keeping your bilge areas clean can also help extend the life of your pump



6.10.7 Raw Water Pump

This pump supplies pressure to the raw water system. It contains a pressure switch similar to a residential well pump. You can leave this appliance on at all times while underway. The raw water pump and strainer are located in the Starboard bilge Access. The strainer is connected to a high speed pickup through the seacock located on the inboard side of the starboard sponson. The seacock must be open for the system to work. World Cat recommends that the seacock remain in the closed position when not in use, or when the boat is left unattended to prevent the vessel from taking on water due to a plumbing failure.



6.10.8 Freshwater Pump

The freshwater pump and wiring are located under the access plate in the floor starboard midship. The freshwater pump is connected to the 20 gallon freshwater tank located beneath the starboard midship access plate. The tank is filled through a fitting located on the starboard side of the deck. Similar to residential well pumps, the freshwater pump pressurizes the system to 45 psi. then shuts down until the pressure drops below that level. Most owners leave the pump "ON" throughout the day, and use the system when necessary. On your 325CC, the freshwater pump feeds the pull out shower located on the aft transom wall, and the marine head.

6.10.9 Macerator Pump

Used to evacuate waste and debris from fish boxes or to remove waste from marine head holding tanks. The pump is located beneath the access plate on the port midship deck. This 12V DC pump is self-priming up to 3' in lift. It has a 1.5" inlet barb and a 1" outlet barb for easy and direct installation. For your safety it is thermally protected and ignition protected.



6.10.10 Livewell and Livewell Pump

The livewell on your 325CC has a capacity of 45 gallons. It is equipped with a single purpose livewell pump and adjustable flow regulator. The pump is located in the port bilge compartment, can be activated by a toggle switch on the dash switch panel, and can be reached through the inspection port in the motorwell. The wiring is secured to the pump using a tie-strap and must be disconnected prior to removing the pump.



The livewell pump draws water through the high speed pickup mounted on the inboard side of the port sponson. A seacock is installed between the pickup and the pump to allow you to seal the system between use, or in the event of a plumbing failure. To operate the livewell, first verify that the seacock and flow regulator are open, then close the valve accessible on the port side of the leaning post. When you have completed these steps, engage the livewell pump using the switch at the dash. The livewell light is also controlled by the switch. Water will fill the tank until it is level with the overboard drain, which evacuates water through the hullside. To clear bait residue from the tank during operation, temporarily open the valve. When you have finished using the livewell, open the valve to allow the water to drain overboard.

NOTICE

While underway, leaving your livewell seacock open could result in inadvertently filling your livewell. To prevent this, close the seacock when the pump is not in operation.

NOTICE

Operating the engines in reverse can cause excessive ventilation near the livewell intake, causing the pump to airlock. To prevent this, turn the pumps "OFF" prior to any continuous or high speed reverse operation. If your pump does become air locked, turn the pump "OFF" for 15 to 30 seconds to correct the problem.

6.10.11 USB Outlets

Located strategically throughout the boat, these outlets provide power to aftermarket accessories such as cell phones, electric reels, and spotlights. Each outlet is independently wired to the fuse panel.

6.10.12 Anchor Windlass - Freefall

Used to deploy and retrieve the anchor. This accessory is controlled by a dedicated switch at the helm and can also be controlled at the bow with up and down foot switches. The fuse is located at the battery management panel.

6.10.13 Windshield Wipers

The pantograph-style, heavy-duty, waterproof windshield wipers with rinse are operated by a dedicated rocker switch at the helm and function identically to those found on passenger automobiles.

6.10.14 Horn

This functions identically to the horn found on a passenger automobile and is operated by the switch labeled "Horn" on the dash switch panel.

6.10.15 Shower

The 325CC features a shower head located portside aft. The shower is supplied water from the 35 gallon freshwater tank. For more information, view the diagram on page 68 and contact your dealer.

6.10.16 Yamaha™ 300 HP 4-strokes with Command Link Plus

The Yamaha™ F300 4.2L V6 Offshore outboards come preinstalled on your World Cat when purchased with this optional package. Yamaha recommends using regular unleaded (minimum pump octane 89) fuel and Yamalube® 4M engine oil. For additional information and specific operating instructions refer to your Yamaha™ owner's manual.

The Yamaha™ package includes the Command Link Plus. This twin engine combo screen displays data for both engines simultaneously. The customizable screen displays critical systems data, including: shift position, engine RPM, boat speed, engine trim level, available fuel in gallons, fuel level, fuel flow, fuel economy, and up to three vital engine functions of your preference.



6.10.17 Fusion® Marine Entertainment System MS-UD755

The FUSION® 755 Marine Entertainment System delivers excellent sound performance and media integration. Featuring 4 JL Audio speakers, remote control, an internal UNI-Dock for charging, environmental protection and playback of the latest compatible Apple iOS, MTP Windows / Android and USB media devices, including Bluetooth A2DP / AVRCP audio streaming capabilities, and support for advanced FUSION-Link™ NMEA 2000 / Ethernet / Wi-Fi / Bluetooth connectivity. For specific operating instructions refer to your FUSION® system owner's manual.



6.10.19 LED Underwater Light Package (Optional)

Your World Cat offers optional LED surface mounted light utilizing the latest high powered LED's. These lights are installed on the port and starboard transom and can be turned on using the corresponding switch on the master switch panel.

6.10.20 Accessory Switch (ACCY)

The additional accessory switch (labeled: ACCY) on the 325CC dash panel that can be used to operate aftermarket products. Be aware of the power requirements for any add-on products, so you do not exceed the capacity of the breaker supplying the switch. Failure to do so could damage the appliance and / or the electrical system.

6.10.23 Marine Head

The marine head is powered by the fuse panel, and has a separate control panel mounted near the head. Water is supplied to the system from the freshwater tank; therefore, to operate the toilet the freshwater system must be pressurized. A solenoid, installed near the head inlet, prevents water from filling the bowl prior to each use. The macerator pump, located beneath the access plate on the port midship deck., removes waste from the bowl and pumps it into the 15 gallon holding tank. The control panel activates the solenoid to allow for water intake and discharge.



!!! WARNING

If the solenoid fails or becomes locked in the open position, shut off the supply system quickly and evacuate the bowl.

Control Panel Operations

The top rocker switch will flush the toilet and fill it at the same time once the switch has been depressed to the right.

The bottom rocker switch performs two functions:

- If depressed to the left it will fill the toilet to a desired level for user comfort.
- If depressed to the right the toilet will be evacuated.

Initial Start Up

On each trip, prior to using the head, complete the following steps:

- Turn on the freshwater system.
- Fill 1/3 of the bowl with water using the lower switch on the control panel.
- Hold down the top switch for 5 seconds to evacuate the bowl and refill with water.



Normal Use

Use the steps below for normal operation:

- Hold the upper switch on the panel down for 5 seconds. This will purge the bowl and refill it with water.
- In the event of inclement weather or rough seas, use the lower switch to remove water from the bowl and prevent sloshing.

!!! CAUTION

Large quantities of waste or paper can clog the head and cause odor issues. To prevent this, flush often and if necessary perform an extra flush to purge the discharge line.

!!! CAUTION

Do not dispose of foreign objects in the head. Doing so may damage the macerator pump or outlet hoses. Clogging or puncturing these lines will lead to odor problems.

Deck Pump Out

Upon returning, use the following instruction to empty the holding tank:

- Remove the cap from the deck pump-out fitting located on deck, outboard of the helm position.
- Use the vacuum hose at the pump-out station to clean the tank, then remove the hose and replace the deck fitting.

Overboard Discharge

Use the following steps to discharge the contents of the holding tank overboard:

- Open the overboard discharge seacock which is located beneath the access plate on the port midship deck. The seacock must be in the open position before attempting to discharge the waste from the waste tank. Use the key switch located on the head switch panel to evacuate the tank.
- Inspect the tank level and repeat if needed, otherwise close the discharge seacock.

!!! CAUTION

Discharging waste in inland waters and some coastal areas is illegal. Check with local and state authorities in your region to determine the proper method for waste disposal.

6.10.24 Plumbing System

The intake and discharge of water is integral to several of the features and accessories provided on your boat, including sanitation devices and water systems. World Cat installs the plumbing components for these systems using high quality marine hoses and stainless clamps. However, this does not eliminate the need for routine checks of plumbing components or connections. A failure resulting from a deteriorated hose or connection could cause your boat to take on water or become swamped. For additional information about the plumbing system refer to the plumbing system diagram and speak with your dealer.

6.10.25 ProMariner ProSport-20 3-Bank Battery Charger

ProSport Marine Battery Chargers provide automatic installation feedback with its exclusive "System Check OK" and individual "Battery Bank Trouble" LED indicators. After fully charging and conditioning batteries, ProSport's Energy Saver Mode will monitor and Auto Maintain batteries only when needed to maintain a full state of charge, resulting in maximum reserve power performance and lower AC power consumption and operating costs. The unit is 100% waterproof / shockproof and includes 4 digitally-selectable charge profiles including a once-a-month storage reconditioning mode for extending battery life. For specific operating instructions refer to the ProMariner ProSport owner's manual.

**6.10.26 Windshield**

The center windshield panel should be closed and latched at any time the boat is underway.

6.10.27 Outriggers (Optional)

Outriggers enhance the fishability of your catamaran and can be a great asset when hunting a trophy catch. World Cat offers Taco™ outriggers as an option. The units are mounted on the fiberglass hardtop and operated using the handles above and outboard of the walkthrough. Use the information provided in section 7.6 to maintain the aluminum on the outriggers and grease the telescoping joints frequently to prevent damage from salt spray.

Chapter 7: Maintenance and Service

7.1 Overview

This chapter provides basic information for maintaining the original appearance and dependable performance of your World Cat. Although your vessel is constructed of the finest materials available, the harsh saltwater environment and other factors, including geography and usage rate, will affect its finish and function over time. It is imperative that you understand how to care for your catamaran properly. Some simple steps will help maintain its aesthetics, value, and reliability.

7.2 Gelcoat Maintenance

Gelcoat is a thin layer of resin mixed with colored pigments, which provides the exterior finish on your boat. Gelcoat provides a smooth durable surface to protect the fiberglass construction of the hull, but is still flexible enough to absorb the pressure exerted upon it during operation. Mainly used for cosmetics, gelcoat is relatively simple to maintain. However, without routine cleaning, it will discolor due to the microscopic pores in the surface.

7.2.1 Cleaning

After each trip on the water, or after trailering long distances, you should clean the boat immediately. Washing the boat with mild detergents, such as dishwashing soaps, and fresh water will help eliminate build up or discoloration resulting from environmental pollutants. Use a sponge or other soft cleaning device on the smooth exterior surfaces of the hull and deck. A soft brush can be used when cleaning nonskid portions of the deck. Make sure to rinse the boat thoroughly after cleaning.

!!! CAUTION

Using strong or caustic cleaning agents, such as bleach, citrus based cleaners, or one containing ammonia, will damage the appearance and strength of your gelcoat.

7.2.2 Waxing

Similar to automotive finishes, gelcoat will begin to fade over an extended period of time. Constant exposure to environmental pollutants will result in a loss of shine. However, it is possible to restore the original luster and color using a polishing compound (mild abrasive) or a rubbing compound (harsh abrasive). Each will remove scratches, discoloration, and help restore weathered gelcoat surfaces. You should select which compound to use based on the severity of the problem

Use the following steps to restore the finish of your gelcoat.

(Note that these procedures assume a moderate level of expertise of the person performing the work. If there is any doubt about ability to successfully accomplish the procedure, for best results it may be best to turn the process over to a professional.)

- Clean the affected area completely using a mild detergent.
- Gently wet sand the affected area using a fine sandpaper (600 grit) to remove any stains. Use plenty of water and always sand in one direction using curved strokes. Sanding in alternating directions could result in damage to the finish.
- Apply polishing compound to a buffing pad and follow the manufacturers instructions. If you apply the compound mechanically, we recommend a lamb wool buffing pad and a electric buffer capable of 1750 to 1800 RPM.
- When you have completely buffed the area, wash away any remaining compound using clean water.
- After thoroughly cleaning the surface, wax the affected area. This will help restore the finish and provide a seal against future discoloration.

!!! CAUTION

Using strong or caustic cleaning agents, such as bleach, citrus based cleaners, or one containing ammonia, will damage the appearance and strength of your gelcoat.

!!! CAUTION

When using an electric buffer, maintain constant motion. Allowing the pad to rest on an isolated spot can cause heat buildup, which can damage the gelcoat.

!!! CAUTION

Routinely clean and wax your catamaran to help prevent the need for excessive use of rubbing and polishing compounds, which over time can deteriorate the gelcoat.

By following the instructions listed above you can guarantee that your catamaran will remain in near showroom condition and remain a source of pride for years to come.

7.2.3 Repair

Although gelcoat is a flexible material capable of handling environmental punishment and extended use, it is susceptible to scratches, blistering and cracking over time. Gelcoat distortion or cracking is unappealing, but rarely represents any structural failure. Have your dealer inspect any damage to your gelcoat to determine the nature of the failure. If it is only cosmetic, they can provide color matched kits, instructions, and any chemicals you need for application or cleanup. Structural damage should be repaired by your dealer or a qualified fiberglass repair shop.

!!! WARNING

Gelcoat and the chemicals used for its application and cleanup are extremely flammable and toxic. Follow all handling and mixing instructions, provide for proper ventilation, and keep water containers nearby to submerge catalyzed materials.

7.3 Bottom Paint

If you intend to leave your boat in wet storage, or routinely dock it for more than a few days, you should coat the hull beneath the water line with anti-fouling paint. This will help prevent marine growth, such as barnacles, which damage the gelcoat and affect performance. World Cat recommends using an epoxy barrier coat prior to painting a new vessel. This will help to prevent, but will not eliminate, gelcoat blistering on the hull, which is not covered by the warranty. Your dealer can provide information on bottom painting to protect against environmental toxins in your area. Anti-fouling paints are made to dissolve over time, so inspect and clean the hull bottom annually and recoat when necessary.

7.4 Upholstery - Standard Tri-Color Upholstery

PERMAGUARD®

SUPERIOR STAIN RESISTANCE

Care & Cleaning Guide

Remove most stains with one of the following steps:

Step 1	baby oil, ketchup, chocolate, motor oil, olive oil, tea, coffee
Steps 2 & 3	eye shadow, crayon, grease, permanent felt tip marker, mustard, lipstick, ball point pen

Step 1: If cleaned immediately, use a clean dry cotton fabric. Wipe once, careful to remove most of the stain without spreading to surrounding area. Wipe more vigorously a second time if residue remains and proceed to step 2.

Step 2: If residue remains use a straight application of the following concentrated cleaners:

- Formula 409®
- Fantastik®

Wipe with a clean cloth, rinse with water and dry. If residue remains, proceed to step 3.

Step 3: More stubborn soiling may be eliminated using a cotton fabric soaked in 91% isopropyl (rubbing) alcohol. Wipe without spreading stain to surrounding area. A second application should be applied with vigorous rubbing in a circular motion. For highly textured material, a soft toothbrush is recommended to clean valleys and crevices. Wipe with a clean cloth, rinse with water and dry.

How It Works



PERMAGUARD® acts as an invisible barrier against stains, allowing them to be cleaned off the surface with ease and virtually no harm to the vinyl.

*Please note, that PERMAGUARD is not "color proof" and indelible inks, particularly those containing certain dyes used in permanent felt tip markers, can leave a shadow if cleaning is delayed beyond 24 hours.

*Results are best when cleaned within the first 24 hours of staining.

This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and all cleaning agents. The use of certain agents can be harmful to the surface appearance and lifespan of vinyl. Spradling, its agents and licensees assume no responsibility resulting from the use of such cleaning agents to the vinyl.

Certain clothing and accessory dyes (such as those used on denim jeans) may migrate to light-colored vinyl. This phenomenon is increased by humidity and temperature and is irreversible.

Formula 409® is a registered trademark of the Clorox Company®. Fantastik® is a trademark of Dowbrands Inc.®/Trademark of the Dow Chemical Co.®

©2013 Spradling International, Inc.®

Please check compatibility when using this product in combination with painted or varnished surfaces.

3415 Roger B. Chaffee
Memorial Drive S.E.
Suite 203
Grand Rapids, MI 49548
800.967.7753



Spradling International
MARINE

1726 Henry G. Lane St.
Maryville, TN 37801
800.247.9901

9/27/2013

7.5 Upholstery - Optional Solid Upholstery

Care and Cleaning of Morbern Vinyl Coated Fabrics



Morbern vinyl requires periodic cleaning to maintain its neat appearance and to prevent the build-up of dirt and contaminants that may permanently stain and reduce the life of the vinyl if they are not removed. The frequency of cleaning depends upon the amount of use and environmental conditions to which the vinyl is subjected. Vinyl upholstery will absorb stains and dyes from fabrics the "pick" or bleed, for example blue denim or bright prints. A vinyl protective finish, sold in furniture or automotive stores, may help to protect the upholstery by resisting or retarding the absorption of these stains. Some household cleaners and solvents remove plasticizers from vinyl making it brittle.

The procedures used for cleaning are dependent upon the end use circumstances.

For Normal Cleaning

In general, most stains can be easily cleaned using warm, soapy water and clear water rinses. Moderate scrubbing with a medium bristle brush will help loosen soiling materials from the depressions of embossed surfaces. For more stubborn stains, use the following commercially available mild detergents in accordance with the manufacturer's instructions:

Formula 409 - All Purpose Cleaner

*When opening a new container, please test the cleaner in an inconspicuous area as cleaner manufacturers may change formula without notice. Morbern cannot be responsible when unknown changes are made by the manufacturer of the cleaner to their formulation between our smallest verification intervals.

Note: Detergents should never be used on a regular basis for normal cleaning. Morbern recommends repeated rinsing with clear water after any cleaning procedure.

Full strength rubbing alcohol or mineral spirits may be tried cautiously as a last resort on very stubborn stains, if the above suggestions do not work. Indiscriminate use of any solvent, or solvent containing cleaner, can severely damage or discolor vinyls.

BLEACH AND ANTISEPTIC SURFACE TREATMENT (for products specified as bleach cleanable):

Bleach can be diluted up to a 9:1 ratio (10%). Liberally apply diluted disinfectant using a sponge. Rinse with cold water several times. Wipe dry. Repeat if necessary.

Federal regulations require that guidelines on the bleach label need to be followed for antiseptic or antimicrobial purposes.

Virox 5, JohnsonDiversey Canada can be used to clean Morbern vinyls. Provisions for Normal Cleaning listed above should be followed.

OTHER COMMON STAINS:

Certain stains may become permanent unless they are removed immediately. The procedure for the removal of the more severe staining agents are outlined below:

Ballpoint Pen, Permanent Marker:

Ink spots will stain vinyl permanently. Immediate wiping with rubbing alcohol in a well ventilated area will remove much of the stain.

Oil Based Paint:

The use of turpentine in a well ventilated area will remove any fresh paint. Dried paint must be moistened carefully with a semi-solid gel-type stripper so that the softened paint can be gently scraped away. Rinse with soap and water.
Caution: Direct contact with paint strippers will remove the print pattern from vinyl. Paint strippers are very caustic. Take care to avoid skin contact by wearing protection.

Latex Paint:

Fresh paint can be wiped off with a damp cloth. Hot, soapy water will normally remove dried latex.

Care and Cleaning of Morbern Vinyl Coated Fabrics



Tar, Asphalt:

Remove immediately, as prolonged contact will result in permanent staining. Use a cloth lightly dampened with mineral spirits and rub the stain gently, working from the outer edge of the stain towards the center in order to prevent spreading. Rinse with soap and water.

Crayon, Mustard, Ketchup:

Sponge with mild soap and water, for stubborn stains that may have set, use a cloth soaked in diluted mild detergent with gentle rubbing. Any remaining stain should be washed with diluted bleach. Rinse repeatedly with clear cold water.

Chewing Gum:

Scrape off as much as possible with a dull knife. Rubbing with an ice cube will assist and make it easier to remove upon scraping. The remaining gum should then be removed in a well-ventilated area using a cloth saturated with mineral spirits. Use light rubbing. Rinse thoroughly with clean water.

Lipstick, Grease, Oil, Eyeshadow, Shoe Polish:

Apply a small quantity of mineral spirits with a cloth and gentle rubbing. Take care not to spread the stain by extending it beyond the original boundary. Shoe polish should be removed immediately, so permanent staining does not occur. Rinse thoroughly with water.

Canary, Ice Cream, Coffee, Tea, Fruit Stains, Liquor, Wine, Suntan Lotion, Soft Drinks:

Use clear, lukewarm water and a sponge repeatedly. Any loose material should be gently scraped with a dull knife. Any soiled area remaining after drying should be gently rubbed with a cloth spotted with a mild detergent solution. Rinse thoroughly with clean water.

Bloods, Leaf Residue:

Rub out any spots with a clean cloth soaked in cool water. If stubborn spots remain, use household ammonia and rinse repeatedly with a clean, wet cloth. Do not use hot water or soapsuds, as this will set the stain.

Bird Excreta, Nausea Stains:

Sponge the stained area with soapy water, containing a diluted bleach, until the stain is removed. Rinse thoroughly with water.

Urine Stains:

Sponge with soapy water containing a small amount of household ammonia. Rinse thoroughly with clear water.

Surface Mildew:

Wash with diluted bleach, use a soft brush for stubborn growth. Rinse repeatedly with clean water.

WARNING

Unspecified cleaners should not be used.

Powdered abrasives, cleaners containing abrasives, steel wool, and industrial strength cleaners are not recommended for Morbern vinyls.

Use of citrus-based cleaners is not recommended by Morbern.

Any lacquer solvent will cause immediate irreparable damage to the vinyl.

Wax should never be used on any vinyl upholstery, as it will cause premature embrittlement and cracking.

If flammable solvents such as alcohol, turpentine or mineral spirits are used for cleaning, then only small quantities should be employed in a well ventilated area. Exercise proper care by advising personnel in the area and keep away from any ignition source. Always wear protective gloves.

!!! WARNING

Do not mix ammonia and household bleach. Doing so will result in the formation of deadly chlorine gas. If it is necessary to use bleach, clean up any traces of ammonia and ventilate the work space for a minimum of 15 minutes prior to applying bleach.

7.6 Trim / Plexiglass / Polyethylene

World Cat uses vinyl, plexiglass, and polyethylene material (Starboard™) throughout the interior of our catamarans.

Use the following instructions to care for these items:

- Use mild detergents to clean vinyl trim commonly used in cabins and helm. Routinely use a commercially available surface protector to seal the vinyl.
- Surface or glass cleaners can be used to clean plexiglass. It is commonly used for radio boxes and as a protective material for instrument panels.
- Starboard™ can be cleaned using surface cleaners such as 409™.

7.7 Stainless Steel / Aluminum

Stainless steel and aluminum are used throughout your vessel. World Cat uses only 316 marine grade stainless hardware and anodized aluminum to provide you with years of service; however, these metals can deteriorate and fail if improperly cared for. Upon returning, clean all hardware using a mild detergent and rinse thoroughly with fresh water. Avoid using abrasive cleaners or chlorine based products, as they will remove the metal's protective coating and lead to pitting or rust. Throughout the year, coat the metal using a non-abrasive metal protector to help displace moisture, remove contaminants, and shield the metal. World Cat recommends high quality sealants such as Boeshield T-9™ developed by Boeing™ Aviation. If you cannot find it locally call PMS Products Inc. at 800-962-1732.

7.8 Powder Coating

Powder coating on t-top frame and windshield frame should be cleaned upon returning. Use a mild detergent and rinse thoroughly with fresh water. Avoid using any kind of abrasive cleaners or chlorine based products. If chipping or scratches occurs we recommend that you make the necessary repairs with color match touch-up paint which has been included in your owners bag.

7.9 Bilge Compartments

Routinely check the condition of the bilge compartments in your boat. This will help identify potential problems and eliminate odors associated with stagnant water and the buildup of residue. Clean the compartments using a freshwater rinse. This will also enable you to check the function of your drain system and the operation of the bilge pumps.

7.10 Cockpit Drains

All World Cats have four drains located in the cockpit, two on both the starboard and port sides. These drains are designed to quickly evacuate the cockpit should the boat become swamped. Flushing these drains routinely will ensure the safety of your crew and vessel, as well as eliminate the potential for odors associated with fish residue. These drains are evacuated through the scuppers located on the hull side. Each scupper has a rubber flap to prevent water from entering the boat. Check this material occasionally to keep the scuppers free of debris and in good working condition.

7.11 Winterization

Routine maintenance checks should be performed prior to each trip in accordance with Chapter 1, but a broader assessment should be done before winterizing your catamaran and prior to the first trip of the season. If your local climate does not require winter storage, complete the following steps at least annually to ensure the safe operation of your boat:

- Do not leave loose items or personal effects onboard during storage. Remove all trash and debris prior to cleaning the boat.
- Before storage, clean the boat thoroughly, including exterior surfaces, fish boxes, livewells, and thru hull fittings. If possible, leave lids open slightly to allow fresh air exchange.
- Remove the garboard drains and store the boat with the bow up to allow drainage.
- Inspect all electrical connections and the operation of pumps or other electrical devices.
- Perform repairs if necessary. Coat electrical panels with an anti-corrosive spray (available from your dealer).
- Inspect the batteries and charge fully to prevent damage during storage.
- Disconnect the cables and apply a coat of grease to the terminals to prohibit corrosion.
- Inspect all plumbing components and connections to prevent leaks.
- Replace any damaged hoses.
- Drain all lines and devices to prevent damage from freezing.
- Lubricate valves to maintain proper operation.
- Use the manufacturer's recommendations for portable and marine heads.
- Inspect fuel system components and replace fuel / water separators. You can keep the system fueled but do not overfill, and use a fuel additive to prevent condensation.
- Lubricate hinges and coat all metal surfaces with a metal protecting compound. Tighten down any hardware if necessary.
- Inspect caulking around hardware, windows, hatches, etc., to prevent water damage. Normal use will break down sealants and can lead to costly repairs if not maintained.
- Remove or cover all electrical devices to prevent damage from UV rays. The rays will cloud electrical displays and make them hard to read.
- Remove cushions and store indoors to prevent damage.
- Winterize the engines and controls per manufacturer's recommendations and inspect all connections, filters, and parts thoroughly. Replace parts as needed.

7.12 Maintenance Schedule

Maintenance	Each Use	Weekly	Monthly	Quarterly	Yearly	As Needed
Clean hull below the waterline				X		X
Bottom paint the hull					X	X
Check / replace sacrificial anodes			X			
Wash boat hardware and canvas	X		X			
Wax exterior gelcoat				X		X
Clean & protect hardware						X
Clean exterior upholstery	X					X
Clean cabin & interior upholstery						X
Flush engines with fresh water	X					
Spray metal components in bilges			X			
Clean bilge				X		X
Check bilge for leaks	X		X			
Inspect steering & controls	X					
Inspect fuel systems for leaks	X					
Replace fuel filters					X	X
Lubricate fuel fill o-rings			X			
Inspect fire extinguisher			X			
Test bilge pump auto switches	X		X			
Check battery electrolyte & service			X			
Check proper functioning of pumps	X					
Replace pumps					X	X
Replace gaskets						X
Inspect & operate thru-hull valves			X			

7.13 Maintenance Log

[illegible]

7.14 Lewmar (Provided By Lewmar)



Overview

Electric deck switches operate in a hostile environment and are subject to salt water, extremes of temperature, direct sunlight and UV effect. They are also susceptible to wear and tear following repeated use and can in some instances suffer accidental damage during boat operations. It is therefore recommended that regular visual and functional inspection of the switch, the circuitry and the equipment being controlled is carried out by a competent qualified person on a regular basis.

If any defects are noted on the switch (see point 2.0 below), replacement is mandatory so as to avoid the possibility of a malfunction. It is further recommended that an item of this nature is not intended to remain in service forever. The lifespan will depend upon the weather and UV conditions to which the switch is exposed as well as the amount of use. Therefore, a service lifespan of 3 to 5 years from date of purchase can be expected, after which time it should be replaced. Shorter lifespans could be experienced and the following inspection recommendations are therefore important in ensuring continuing safe operation.

Inspection

- 1.0 The deck switch and the system it controls should be fully tested in a 'No Load' condition prior to full functional operation as per its design purpose, before every trip, activity or task. Only after the skipper has satisfied themselves of the safe and functional operations should the equipment be used.
- 2.0 The deck switch should be inspected pre-departure or use paying particular attention to the following:
 - 2.1 Ensure there is no visible damage to the switch
 - 2.2 Ensure there is no noticeable wear to the switch, it's housing, it's button or fixings
 - 2.3 Ensure the rubber membrane over the switch is not sticky or has any deposits or residue from cleaning fluids or other prohibited materials
 - 2.4 Ensure the rubber membrane over the switch does not show any signs of cracks, splits or signs of degradation. This includes a change in colour from shiny to a matt finish
 - 2.5 The main switch housing should not have any visible chips or cracks
 - 2.6 The switch should have a smooth positive feel with a distinct click that can be felt at the point of operation
 - 2.7 There should be no signs of water ingress on any part of the switch assembly
 - 2.8 Ensure that the fixings screws and seal to the deck bulkhead or coach roof are secure, and remain effective in both securing the switch and preventing water ingress
 - 2.9 The switch should not feel spongy and should not make a squelch or bubbling noise due to water ingress when depressed and operated

NOTE

If any of the points highlighted in 2.0 through to 2.9 are detected during inspection, the deck switches should not be used and should be replaced.

- 3.0 On an annual basis the deck switch should be removed by a qualified electrical technician to carry out the following:
 - 3.1 All the checks detailed in 2.0 – 2.9 of this product service update
 - 3.2 Inspect the underside of the deck switch for signs of corrosion, damage or water ingress
 - 3.3 Inspect the wiring for signs of loose connections or corrosion
 - 3.4 In open circuit mode (OFF) condition the resistance should be checked for a recording on the test meter beyond measurement to confirm no electrical connection.
 - 3.5 In closed circuit mode (ON) condition, the resistance should be less than 3 Ω (ohms)
 - 3.6 If the switch shows any signs of excessive wear, degradation in its action, water ingress or loss in its electrical resistance properties, it should be changed immediately

Additional Guidance

- 4.0 It is the responsibility of the skipper to ensure that crew members are trained in the operation of powered deck equipment and use it in a safe and appropriate way within it's designed operating parameters. This includes what to do in an emergency.
- 4.1 It is the responsibility of the skipper to ensure that crew members are appropriately briefed on all three methods of equipment isolation in event of emergency, i.e :-
 - 4.1.1 The switch itself and it's operation
 - 4.1.2 The circuit breaker on main panel
 - 4.1.3 The main battery isolation
- 4.2 Crew briefings should always cover the following issues pertaining to deck switch operated equipment:-
 - 4.2.1 Safe operation of any powered deck equipment
 - 4.2.2 What to do in the event of an emergency
 - 4.2.3 What not to do in event of emergency
 - 4.2.4 A practical demonstration of the effective isolation of deck equipment as highlighted in point 2 above
- 4.3 Deck switches are designed to be used in conjunction with Lewmar equipment only. If they are to be used for the powering of any other electrical equipment the intended use should be checked against the specification of the switch.
- 4.4 Deck switches should only be operated with fingers, bare feet or soft soled shoes.
- 4.5 Switches should be left with the lid closed to minimise environmental degradation and the potential for accidental operation.
- 4.6 Powered deck equipment should always be isolated when not in use to prevent accidental start up.
- 4.7 The instructions for the equipment being operated should always be read and followed.
- 4.8 Power washers should not be used on or near any switch.
- 4.9 It is acknowledged that deck switches will need to be washed down as part of a deck cleaning process. However, direct flow from a non pressure hose should not be aimed at the switch.
- 4.10 The deck switch itself should only be cleaned with a mild soap and washed off immediately with a light application of fresh water.
- 4.11 The following (non exhaustive) list of substances should not be applied, or used on or near any deck switch. Products include but are not limited to:-
 - 4.11.1 Chemicals
 - 4.11.2 Deck cleaners
 - 4.11.3 Petroleum based fluids/cleaners
 - 4.11.4 Deck polish
 - 4.11.5 Deck brightener
 - 4.11.6 Varnish/lacquers/paints
 - 4.11.7 Oil

LEWMAR®

Specific Considerations for Winch Operation Manual B2303 Issue 7

Winch Operation

Please ensure that you thoroughly understand the operation and safety requirements of the winch before commencing the installation. Only persons who are completely familiar with the controls and those who have been fully made aware of the correct use of the winch should be allowed to use it. If there is any doubt of how to install or operate this unit please seek advice from a suitably qualified engineer.

- * Winches used incorrectly could cause harm to equipment or crew.*
- * Winches should be used with care and treated with respect.*
- * Sailing, like many other sports can be hazardous. Even the correct selection, maintenance and use of proper equipment cannot eliminate the potential for danger, serious injury or death.*
- * Lewmar winches are designed and supplied for line control in marine applications and are to be used in conjunction with appropriate clutches, cleats and other manual controls and stoppers.*
- * It is the unavoidable responsibility of the owner or master or other responsible party to assess the risk of any operation on the vessel.*
- * Under no circumstances should any self tailing winch be used in self tailing mode for any lifting operation; rather suitable and adequate manual tailing should be arranged with proper means of manually cleating or stopping the hoist.*
- * Every winch should be installed with adequate means of manually cleating or stopping the loaded ropes.*

Specific Considerations for Windlass Operation Manual 65001201 Issue 2

Windlass Operation

Classification Societies and Lewmar require that a vessel at anchor must have its rode held by a chain stopper or equivalent strong point at all times!

At all times it is the responsibility of the boat user to ensure that the anchor and rode are properly stowed for the prevailing sea conditions. This is particularly important with high-speed powerboats, because an anchor accidentally deploying while under way can cause considerable damage. An anchor windlass is mounted in the most exposed position on a vessel and is thus subject to severe atmospheric attack resulting in a possibility of corrosion in excess of that experienced with most other items of deck equipment. As the windlass may only be used infrequently, the risk of corrosion is further increased. It is essential that the windlass is regularly examined, operated and given any necessary maintenance.

Please ensure that you thoroughly understand the operation and safety requirements of the windlass before commencing the installation. Only persons who are completely familiar with the controls and those who have been fully made aware of the correct use of the windlass should be allowed to use it. If there is any doubt of how to install or operate this unit please seek advice from a suitably qualified engineer.

LEWMAR®

- *Windlasses used incorrectly could cause harm to equipment or crew.*
- *Windlasses should be used with care and treated with respect.*
- *Sailing, like many other sports can be hazardous. Even the correct selection, maintenance and use of proper equipment cannot eliminate the potential for danger, serious injury or death.*
- *Lewmar windlasses are designed and supplied for anchor control in marine applications and are not to be used in conjunction with any other use.*
- *It is the unavoidable responsibility of the owner or master or other responsible party to assess the risk of any operation on the vessel.*

Additional Information

- *Lewmar recommends the use of appropriate Personal Protective Equipment and hands free communication equipment by any person going aloft, and only then where the person going aloft is properly trained in the use of that equipment and where there remain sufficient trained and experienced personnel on deck to ensure constant observation and the continued safe conduct both of the vessel and the hoisting operation.*

Chapter 8: Hurricane Preparedness Customer Checklist

Equipment To Be Kept On Board:

- ☐ Chafing gear
- ☐ Fenders
- ☐ Flashlight with spare batteries
- ☐ Two sufficient anchors with 300' or more oversized rode
- ☐ Battery-operated radio

Check Monthly:

- ☐ Exterior lights operable
- ☐ Auto bilge pump operating (check battery)
- ☐ Hatches are watertight
- ☐ Power and electric gear operating
- ☐ Engine battery charged
- ☐ Flashlight battery charged
- ☐ Radio batteries charged

To Do At A New Marina:

- ☐ Learn marina approaches and basin.
- ☐ Learn the size and type of your mooring.
- ☐ Ensure mooring and lines are sufficient for all likely wind direction and velocity.
- ☐ Ensure mooring has enough weight and scope and is properly set.
- ☐ Learn your moorage lease and rental agreement responsibilities.
- ☐ Learn responsibilities for your boat's safety when a hurricane is approaching.
- ☐ Develop a plan for securing your vessel outside the marina if you plan to evacuate.
- ☐ If evacuating, visit the site by boat and time the trip.
- ☐ Learn what possible delays you may encounter when evacuating (drawbridges, boat traffic ,etc.).
- ☐ Photograph your boat and surroundings.
- ☐ Keep a list of all equipment on board.
- ☐ Keep a list of all equipment that will be removed during storm preparations.
- ☐ Keep a complete set of records for your boat at home.
- ☐ Give the marina operator the name and number of your absentee skipper.
- ☐ Give the marina operator a description of your boat, registration number and location.

Docked Boat Preparations:

- ☐ Strip all removable items, including spare rigging.
- ☐ Clear self-bailing cockpit drains.
- ☐ Close all thru-hull fittings.
- ☐ Set chafing gear where lines will rub (chocks, cross lines, deck edge, dock edge etc.).
- ☐ Remove portable fuel and oil storage containers.
- ☐ Remove ship papers.
- ☐ Shut off fuel tanks.
- ☐ Leave anchor light on.
- ☐ Leave auto bilge pump on.
- ☐ Check openings to ensure boat is watertight.
- ☐ Set and check storm anchors.
- ☐ Consider attaching 3 sets of bow and stern spring lines.
- ☐ Consider attaching lines to cleats at a 45 degree angle.
- ☐ Consider tying your boat between two piers or along a pier and anchored off one side.

Moored Boat Preparations

Make Plans To Have Someone Pick You Up From Your Boat Before The Storm Arrives

- ☐ Strip all removable items, including spare rigging.
- ☐ Clear self-bailing cockpit drains.
- ☐ Close all thru hull fittings.
- ☐ Remove portable fuel and oil storage containers.
- ☐ Remove ship papers.
- ☐ Shut off fuel tanks.
- ☐ Leave anchor light on.
- ☐ Leave auto bilge pump on.
- ☐ Check openings to ensure boat is watertight.
- ☐ Use storm pennants to increase scope.
- ☐ Attach chains directly to pennants instead of swivels.
- ☐ Add an emergency catenary weight at the vessel end of the chain.
- ☐ Use double or triple chafe protection.
- ☐ Use chafing gear over entire length of pennants.
- ☐ Use two pennants.
- ☐ If no permanent mooring is available, use two storm anchors at 45 degree angles.

Trailerable Boat Preparations

Store in a garage:

- ☐ Strip all removable items, including spare rigging.
- ☐ Clear self-bailing cockpit drains.
- ☐ Close all thru-hull fittings.
- ☐ Remove portable fuel and oil storage containers.
- ☐ Remove ship papers.
- ☐ Shut off fuel tanks.
- ☐ Leave auto bilge pump on.
- ☐ Check openings to ensure boat is watertight.
- ☐ _____
- ☐ _____
- ☐ _____

If no garage is available:

- ☐ Secure trailer to a sturdy object.
- ☐ Let half the air out of the trailer tires.
- ☐ Put wood blocks between the frame and axle.
- ☐ Take out the drain plugs.
- ☐ Cover with tarp.
- ☐ Use tie-downs.
- ☐ _____
- ☐ _____
- ☐ _____

Anchored Boat Preparations

Make Plans To Have Someone Pick You Up From Your Boat Before The Storm Arrives

- ☐ Strip all removable items, including spare rigging.
- ☐ Clear self-bailing cockpit drains.
- ☐ Close all thru-hull fittings.
- ☐ Remove portable fuel and oil storage containers.
- ☐ Remove ship papers.
- ☐ Shut off fuel tanks.
- ☐ Leave auto bilge pump on.
- ☐ Check openings to ensure boat is watertight.
- ☐ Use 3 or 4 substantial anchors and good tie rope.
- ☐ Tie your boat high on the mainland to a substantial tree or similar structure.
- ☐ Do not tie parallel to the bank.
- ☐ Keep a navigable passage at your stern to allow other boats passage.
- ☐ Use enough line to allow for storm surge.
- ☐ Leave enough room between your boat and others to allow for swing.
- ☐ Take valuables off.
- ☐ -----
- ☐ -----
- ☐ -----
- ☐ -----

Customer: _____ Model: _____

Dealer: _____ Date: _____

Taking delivery of a new boat, with many new features and systems, can often be an information overload. At World Cat we want to ensure that your delivery process goes smoothly, and that you have access to the best information in the future.

To make the process easier, we provide this quick checklist. Please ensure that all of these steps have been completed before you take possession of your new boat.

- You received an on-the-water orientation to demonstrate the operation of your new boat, along with all of its features and systems.
- You have been introduced to the Service Manager, who explained proper engine break-in, and the future care and maintenance of your boat and motors.
- You were provided with an after-hours contact by your dealer, to answer any questions you may have once you are out enjoying your new World Cat.
- You received your new boat properly cleaned, detailed, and ready to enjoy.

From the entire team at World Cat, welcome to the family! Please have a safe and enjoyable time on the water enjoying your new boat.

In the next few weeks, after you have had time to really get to know your new boat, we will be sending you a survey in which we will ask you to rate your buying experience, and your initial impressions of your new World Cat. We encourage you to be honest in your opinions, as it's this type of direct feedback that helps us get better every day.

Signature,

New World Cat owner: _____

Dealership: _____ Representative: _____

Customer: _____

Delivery Date: _____

Hull I.D. Number: _____

Engines	Y	N	N/A
PDI - Manufacturer Spec			
Alignment			
Power Trim & Tilt			
Props			

Electrical System	Y	N	N/A
AC			
Shorepower Cord			
Outlets			
Microwave			
Refrigerator			
Air Conditioning			
Water Heater			
Battery Charger			
TV/DVD			

DC	Y	N	N/A
Battery Charge 12.4 Volts			
Bilge Pumps Manual			
Bilge Pumps Auto			
Navigation Instruments			
Navigation Lights			
Lights Interior/exterior			
Horn			
Wipers			
Stereo			
Cabin Heat			
Electrical System Monitor			
Macerators Pumps			
Generator			

Instrument Check	Y	N	N/A
Gauges:			
Oil			
Temperature			
Volt			
Tachometer			
Fuel			
Compass			

Plumbing System	Y	N	N/A
Check for leaks:			
Sink			
Shower			
Toilet			
Freshwater tank			
Holding Tank			
Baitwells			

Deck Hardware	Y	N	N/A
Doors			
Windows w/screens			
Cabinets			
Hatch & Window Screens			
Curtain Pkg			
Windlass Pkg			
Tackle Boxes w/trays			

Upholstery/Bedding	Y	N	N/A
Exterior Upholstery			
Interior Upholstery			
Bedding/Pillows			

Furniture	Y	N	N/A
Cockpit/Bow Table			
Bench Seats			
Cocktail Table/Bow filer			

Exterior (Condition)	G	P
Rails		
Finish of:		
Cockpit		
Deck		
Hull		
Windshields/Windows		
Gel Coat Surfaces		

Interior (Condition)	G	P
Floor Laminates		
Woodwork		
Countertops		
Mirrors		
Gel Coat Surfaces		

Trailer Check	Y	N
Coupler/Hitch Match		
Wheel Lugs Tight		
Trailer Straps		
Safety Chain		
Tire Pressure		
Lights		
Brakes		
Wheel Bearings		

Keys	Y	N
Ignition #		
Cabin Door #		
Fuel, Water & Waste		

Safety Equipment	Y	N
Fire Extinguisher (Charge)		
First Aid Kit		
Personal Flotation Device		
Fenders w/Lines		
Dock Lines		
Flares		
Signal Horn Kit		
Orange Whistle		
Throwable Cushion		
Anchor/Rode		
Armstrong motorwell lids (2)		
Garboard drain plugs (2)		

Owner's Information	Y	N
Owner's Manual		
Warranty Information		

Hard Top	Y	N
Powder Coating Damaged		
Canvas Enclosure		
Canvas Damaged		
Canvas Fit Properly		

General Care Explained	Y	N
Batteries		
Stainless		
Upholstery		
Gel Coat Finish		
Trailer Brake Fluid		
Trailer Rinsing		
Engine Flush		
Power Steering Fluid Fill		
Wiper Fluid Fill		
Water Fill		
Fuel Additive for ethanol		

Electronic Equipment	Y	N
VHF Radio (Dealer Opt)		
Radar (Dealer Opt)		
Antenna(s) (Dealer Opt)		
Depth Finder (Dealer Opt)		
Auto Pilot (If Ordered)		

Engine Mfg & HP: _____
Port Engine S/N: _____

Propellers (size): _____
Stdby Engine S/N: _____

- ☐ Boat inspected with the above P.D.I. checksheet, and all items found deficient have been repaired or replaced.
- ☐ Boat has received a pre-delivery sea trial
- ☐ Yamaha P.D.I. has been completed
- ☐ Boat has been detailed for customer delivery

Comments: _____

Dealer Service Manager Signature: _____ Date: _____

Chapter 9: 2022 Warranty Policy



2022 MODEL YEAR LIMITED WARRANTY

Congratulations on the purchase of your World Cat product. We want you to have years of pleasure and fun aboard your new World Cat boat. This document is your Limited Warranty. It describes the terms and conditions of the warranty agreement between us. It applies to all World Cat Products sold under the World Cat or Glacier Bay Edition brands manufactured beginning with the 2022 Model Year. Your Model Year is identified by the Hull Identification Number ("HIN"), which is unique to every boat and is located on the stern.

It is important to understand what a limited warranty does. It is an agreement between you and World Cat that your vessel will be free from substantial defects in material and workmanship for a specified length of time. However, if a defect does occur, you and World Cat agree that you will allow World Cat to repair it or, at our discretion, replace it as set forth herein. All products need repairs and maintenance from time to time, especially boats. Boats have a rough life in that they often go long periods between use, and when they are used, boats must perform in a difficult environment. Because of this, you should understand what your limited warranty does and does not cover and the terms and conditions that apply to it. Please note that there are disclaimers and limitations on page two of this Limited Warranty.

I. LIMITED WARRANTY

1. **Ten Year Limited Hull Warranty.** World Cat warrants that it will repair, or at its sole and exclusive discretion, replace any substantial defect in material or workmanship in the hull (defined as the one-piece fiberglass molded part that acts as the vessel's running surfaces) for the first ten (10) years following the date of purchase by the original retail owner. In the event that World Cat determines that your hull must be replaced, you agree to give us back the original hull and we will put a new hull on your boat. The replacement hull will be an upgraded model if the original model is no longer offered. Transfer of all accessories, including engines and electronics, will be at owner's expense.
2. **One Year Limited Material And Workmanship Warranty.** World Cat warrants that it will repair or, at its sole and exclusive discretion, replace any substantial defect in material or workmanship in any other parts or components of the boat that do not carry their own, separate written warranty, for a period of one (1) year following the date of purchase by the original retail owner. *Under no circumstances will World Cat warrant the engine, trailer or electronics.*

II. WARRANTY LIMITATIONS

THIS LIMITED WARRANTY DOES NOT COVER THE FOLLOWING:

1. Defects and/or damage arising out of engines transmissions, running gear and outdrives, metal plating or finishes, windshield breakage, and leakage due to seal and/or caulk shrinkage and/or normal wear and tear;
2. Defects and/or damage to gel coat or painted surfaces including, but not limited to, discoloration, fading, chalking, and/or osmotic blistering;
3. Defects and/or damages related to accessories, alterations, modifications or installations which were not part of the boat when shipped from the World Cat factory, and/or not authorized in writing by World Cat;
4. Damage and/or defects related to misuse, such as groundings and impacts with docks, pilings, navigation buoys, etc.; accidents; reckless, unsafe or improper use relative to existing sea conditions; lack of recommended maintenance, or improper trailering, blocking or lifting; and/or repairs by the owner or other persons without prior, written authorization from World Cat;
5. Use of the boat for competition, racing, or used for rental, business or commercial purposes without the prior written authorization of World Cat. Rental, racing, business or commercial use without prior, written authorization voids this warranty;
6. Defects and/or damage related to operation of the boat in violation of any Coast Guard regulations or other governmental laws, rules, or regulations;
7. Mildew, water damage, dry rot, staining or water absorption on interior materials and/or surfaces including but not limited to upholstery, cushions, cabinets or floor coverings, as a result of sustained exposure to humid conditions.
8. Galvanization and/or electrolysis or and other damage caused or contributed to by stray electrical current.
9. Defects, injury, costs or damages arising out the use of engines with a rated horsepower exceeding the maximum rated horsepower for each model as defined by World Cat Boats or as reflected on the capacity label.

III. CUSTOMER OBLIGATIONS:

1. You must sign and submit to World Cat the "LIMITED WARRANTY REGISTRATION FORM" within thirty (30) days of the date of delivery. Your dealer can do this for you, but it is up to you to request them to do so. **THE REGISTRATION FORM IS NOT A WARRANTY AND MAY NOT BE USED TO MODIFY OR CONFLICT WITH ANY TERMS OF THIS LIMITED WARRANTY;**
2. In the event you discover a defect, you must first notify the dealer from whom the boat was purchased within a reasonable period of time (not to exceed thirty (30) days) after you know or should know the defect exists;



2022 MODEL YEAR LIMITED WARRANTY

3. World Cat will not be responsible for damage or to continue to repair or replace your boat or any part of it if your continued use prior to repair causes additional damage;
4. If you believe a claim has been denied in error or the dealer has performed the warranty repairs in an unsatisfactory manner, the owner must notify the World Cat Customer Service Department in writing within thirty (30) days of the repair attempt at the address listed below under "Notice." World Cat will then review your claim and take appropriate follow-up action.
5. You should keep records of all maintenance services. This record of proper maintenance may be required to determine warranty coverage on certain repairs and should be transferred to each subsequent owner. Please refer to the Owner's Manual that came with your boat for the proper maintenance procedures.
6. In the event a repair must be made at a factory authorized repair center or at the World Cat factory, transportation to and from the repair center shall be made at the Customer's expense and not at the expense of World Cat or its authorized dealer.

IV. TRANSFERABILITY

You can transfer the unexpired term of this limited warranty once to a new owner, provided that the transfer occurs during the first (5) five years after the date of purchase. A copy of the bill of sale from the original owner is required, as well as completion of the transfer form. The new owner must register the transfer of limited warranty within 30 days of purchase, by sending a written request to the address listed in the **Notice** section below along with a registration fee of \$395. World Cat reserves the right to reject any warranty transfer request for a boat that has been damaged, neglected or otherwise previously excluded from warranty coverage.

V. DISPUTE RESOLUTION

MANDATORY MEDIATION BEFORE SUIT

IN THE UNLIKELY EVENT WE CANNOT AGREE ON A RESOLUTION OF ANY ISSUE REGARDING YOUR BOAT AND/OR THE TERMS OF THIS AGREEMENT, OR IN FACT OF ANY ISSUE ARISING BETWEEN YOU AND WORLD CAT AND/OR A WORLD CAT DEALER, YOU AND WORLD CAT AGREE TO SUBMIT THE DISPUTE TO MEDIATION. MEDIATION IS A SETTLEMENT CONFERENCE BEFORE A TRAINED MEDIATOR THAT YOU AND A WORLD CAT REPRESENTATIVE WITH AUTHORITY TO RESOLVE OUR DIFFERENCES ARE REQUIRED TO ATTEND. WE WILL PAY THE COSTS OF MEDIATION, BUT WORLD CAT WILL NOT BE RESPONSIBLE FOR TRAVEL EXPENSES, OTHER COSTS OR ATTORNEY FEES. YOU AND WORLD CAT WILL SELECT A MUTUALLY AGREEABLE MEDIATOR TOGETHER. IF WE CANNOT AGREE, THEN ANY JUDGE WITH POTENTIAL JURISDICTION OVER THE CASE WILL SELECT THE MEDIATOR. THE MEDIATION WILL BE AT A MUTUALLY AGREEABLE LOCATION BUT IT WILL ALSO BE WITHIN 100 MILES OF THE PLACE OF PURCHASE UNLESS OTHERWISE AGREED. YOU AGREE THAT NO LAWSUIT OR ARBITRATION OR ADMINISTRATIVE ACTION OF ANY KIND FOR ANY TYPE OF DAMAGE OR REMEDY MAY BE REQUESTED OR FILED UNTIL THIS MEDIATION IS COMPLETED. THE MEDIATION SHALL BE COMPLETED WITHIN SIX MONTHS OF THE FIRST DEMAND BY YOU OR WORLD CAT TO MEDIATE UNLESS OTHERWISE AGREED.

VI. DISCLAIMER OF IMPLIED WARRANTIES

THIS IS A LIMITED WARRANTY. WORLD CAT MAKES NO WARRANTY, OTHER THAN AS CONTAINED HEREIN AND NO DECALS, PROMOTIONAL LITERATURE, BROCHURES, WEBSITE MATERIALS AND/OR PRE-DELIVERY SERVICE INSPECTION RECORDS/FORMS OR BROCHURES SHALL BE CONSTRUED AS ANY ADDITIONAL OR SEPARATE WARRANTY. TO THE EXTENT ALLOWED BY LAW, ALL WARRANTIES OF MERCHANTABILITY, WORKMANSHIP, SEAWORTHINESS OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED AND EXCLUDED.

VII. LIMITATION OF REMEDY AND EXCLUSION OF CERTAIN DAMAGES

ALL INCIDENTAL AND/OR CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM THIS LIMITED WARRANTY. YOU AND WORLD CAT AGREE THAT YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY (AND ANY IMPLIED OR STATUTORY WARRANTY) IS THE REPAIR OR REPLACEMENT OF THE VESSEL OR DEFECTIVE COMPONENT AS SET FORTH ABOVE. NO OTHER LEGAL OR EQUITABLE REMEDIES SHALL BE AVAILABLE TO YOU IN RETURN FOR THE BENEFITS OF THIS LIMITED WARRANTY.

VIII. PERFECT TENDER

A "PERFECT TENDER" MEANS THAT WE HAVE A RIGHT TO REPLACE YOUR BOAT IF, IN OUR DISCRETION, THE CLAIMED DEFECT REQUIRES REPLACEMENT AND WE AGREE TO DO SO IMMEDIATELY. FOR THESE PURPOSES, "IMMEDIATELY" MEANS WITHIN NINETY (90) DAYS FROM THE DATE YOU FIRST NOTIFY US THAT YOU BELIEVE THAT WE HAVE FAILED TO HONOR THIS LIMITED (OR ANY OTHER) WARRANTY AND/OR OTHERWISE FAILED TO PROPERLY REMEDY A SUBSTANTIAL DEFECT. IN THE EVENT YOU NOTIFY US IN WRITING, PER THIS AGREEMENT, OF A FAILURE ON OUR PART AND WE AGREE TO REPLACE YOUR BOAT WITH A NEW BOAT AS DESCRIBED IN YOUR ORIGINAL PURCHASE AGREEMENT, THEN IN THE EVENT YOU REJECT THE OFFER OF A NEW BOAT AND FILE A LAWSUIT OR OTHER LEGAL CLAIM, YOU AGREE THAT IN RETURN, WORLD CAT WILL BE NOT RESPONSIBLE FOR YOUR ATTORNEY FEES AND COURT COSTS. IF YOU HAVE FINANCED THE BOAT, YOU MUST EITHER



2022 MODEL YEAR LIMITED WARRANTY

PAY OFF THE AMOUNT YOU OWE BEFORE WE DELIVER THE NEW BOAT OR WE WILL ASSIST YOU TO SUBSTITUTE THE NEW BOAT AS COLLATERAL. WE ARE NOT RESPONSIBLE FOR PAYING OFF YOUR PRESENT BOAT

IX. OTHER TERMS AND CONDITIONS

This limited warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states and/or federal laws do not allow limitations to implied warranties or as to remedies or certain damages, so the above disclaimers and/or limitations may not apply to you.

World Cat will discharge its obligations under this warranty as quickly as possible, but we *cannot guarantee any specific completion date*. This is due to the potential complexity of the repair or the availability of parts from sources over which World Cat has limited control. You agree that the time for repairs does not include time spent waiting for parts or the time your boat may end up stored at our factory or at a dealer for your convenience or due to scheduling.

World Cat reserves the right to change or improve the design of its boats, without obligation to modify any boat previously manufactured. World Cat shall in no way be responsible for any repairs not PRE-AUTHORIZED by a World Cat Customer Service Manager or repairs performed by a repair shop not PRE-AUTHORIZED by a World Cat Customer Service Manager. "PRE-AUTHORIZED" means that we have prior approval in how the repairs are performed *before* they are performed.

X. NO WAIVER OF THESE TERMS

The terms, conditions, limitations and disclaimers contained herein cannot be waived except by a management level employee of World Cat. Any waiver we give shall be in writing. Neither the dealer, nor any service, sales and/or warranty representative of World Cat are authorized to waive and/or modify these conditions, limitations and/or disclaimers.

XI. NOTICE:

All communications and notices from you and/or a new owner requesting a transfer of this limited warranty should be sent to: World Cat Customer Service, 1090 West Saint James Street, Tarboro, NC 27886 or faxed to 919-882-8035. You can also email us at: service@worldcat.com, but you must request an acknowledgment that our Customer Service Department actually received it.

Acknowledgment of Limited Warranty.

By signing below, you agree that you have read this limited warranty in its entirety and understands its terms and conditions. You acknowledge that you have received a copy of this limited warranty at or before the time of the sale.

WARRANTY REGISTRATION

Purchaser's Name

Purchaser's Phone Number

Purchaser's Street Address

Date of Delivery

Purchaser's City, State and Zip Code

Hull Identification Number

Purchaser's Email Address

Boat Model

Purchaser's Signature


Selling Dealer

Dealer's Sales Representative



Check one: ☐ Original Owner ☐ Second Owner

10.4 System Diagrams


10.4.1 Access Plate and Rigging Tube Diagram

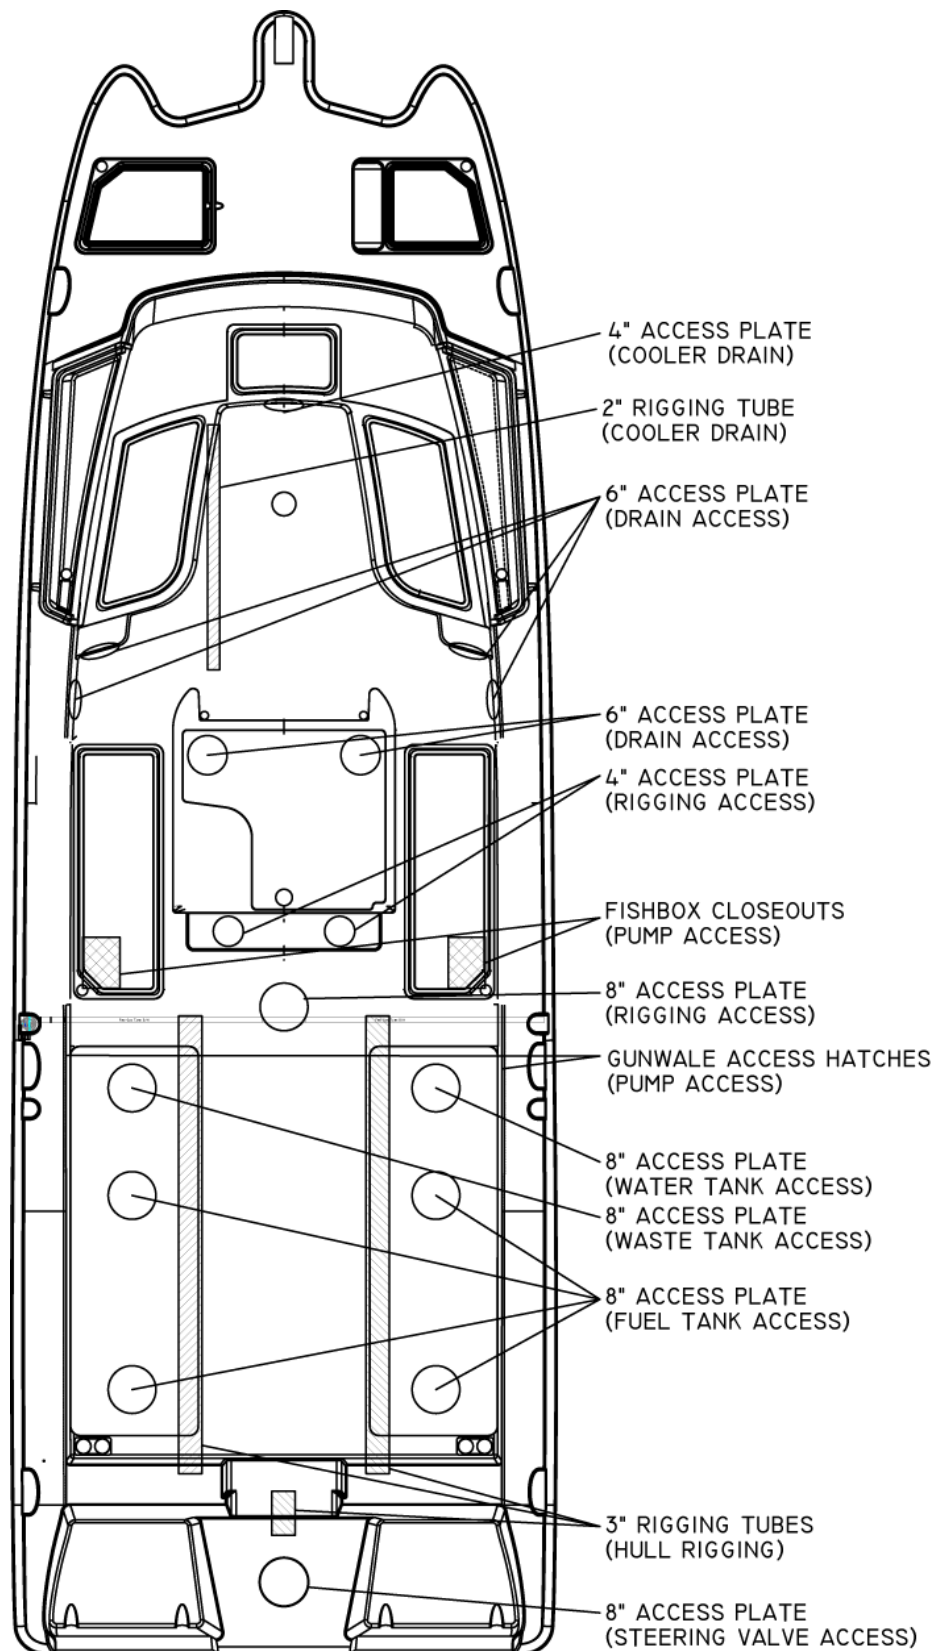


10.4.2 Hardtop Wiring Diagram

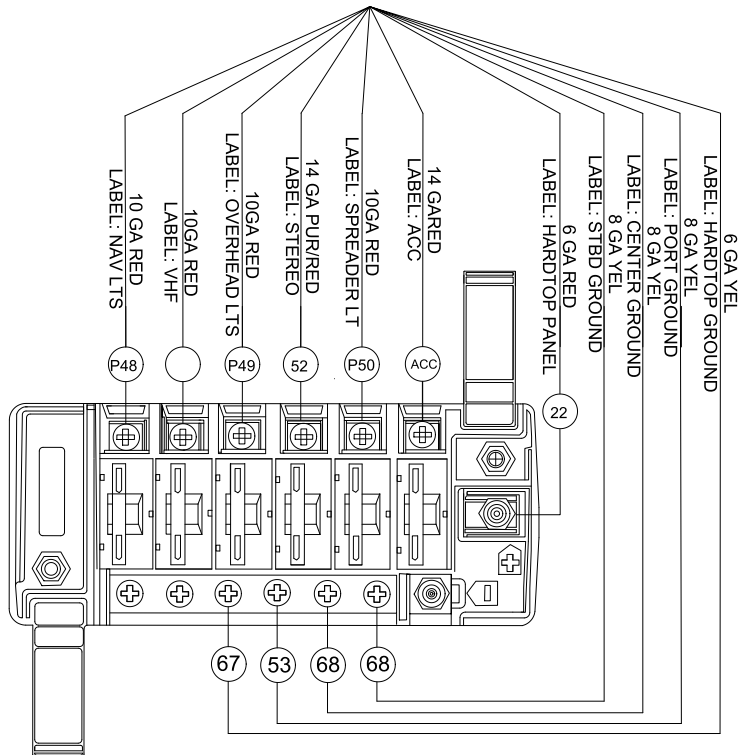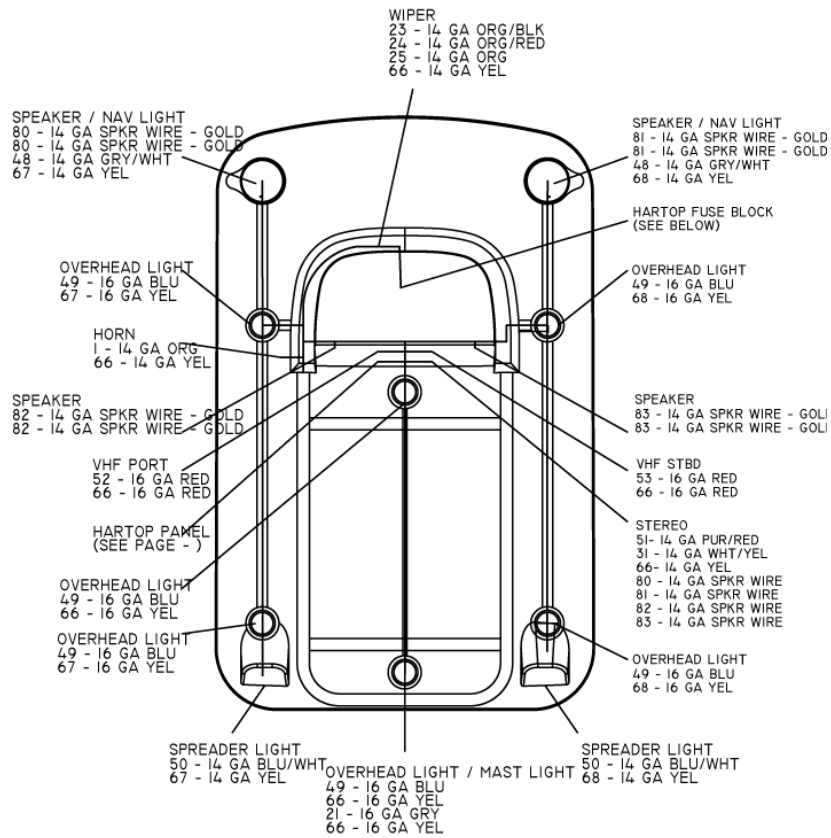


10.4.3 Console Wiring Diagram

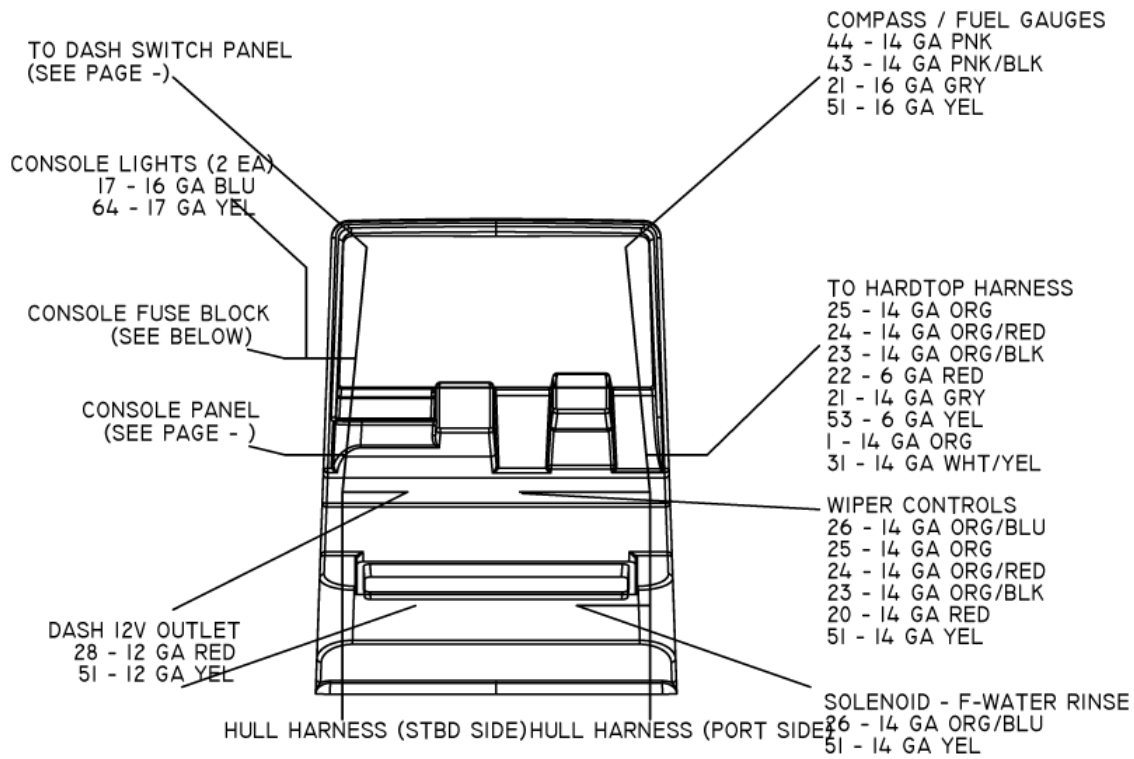


CONNECTIONS TO THE ITEMS SHOWN HERE CAN BE REACHED THROUGH THE ACCESS DOORS LOCATED ON THE CONSOLE BULKHEAD OR BY REMOVING THE ELECTRONICS BOX

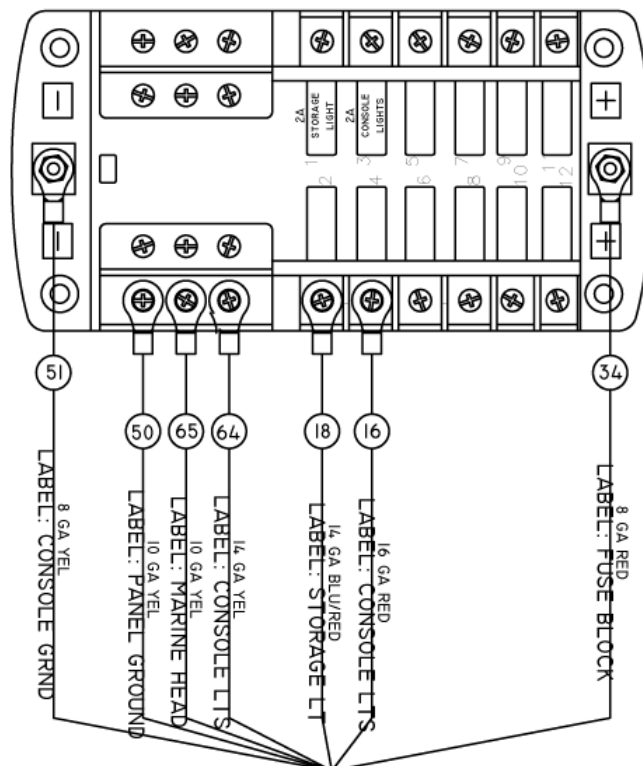





10.4.4 Battery Panel Wiring Diagram

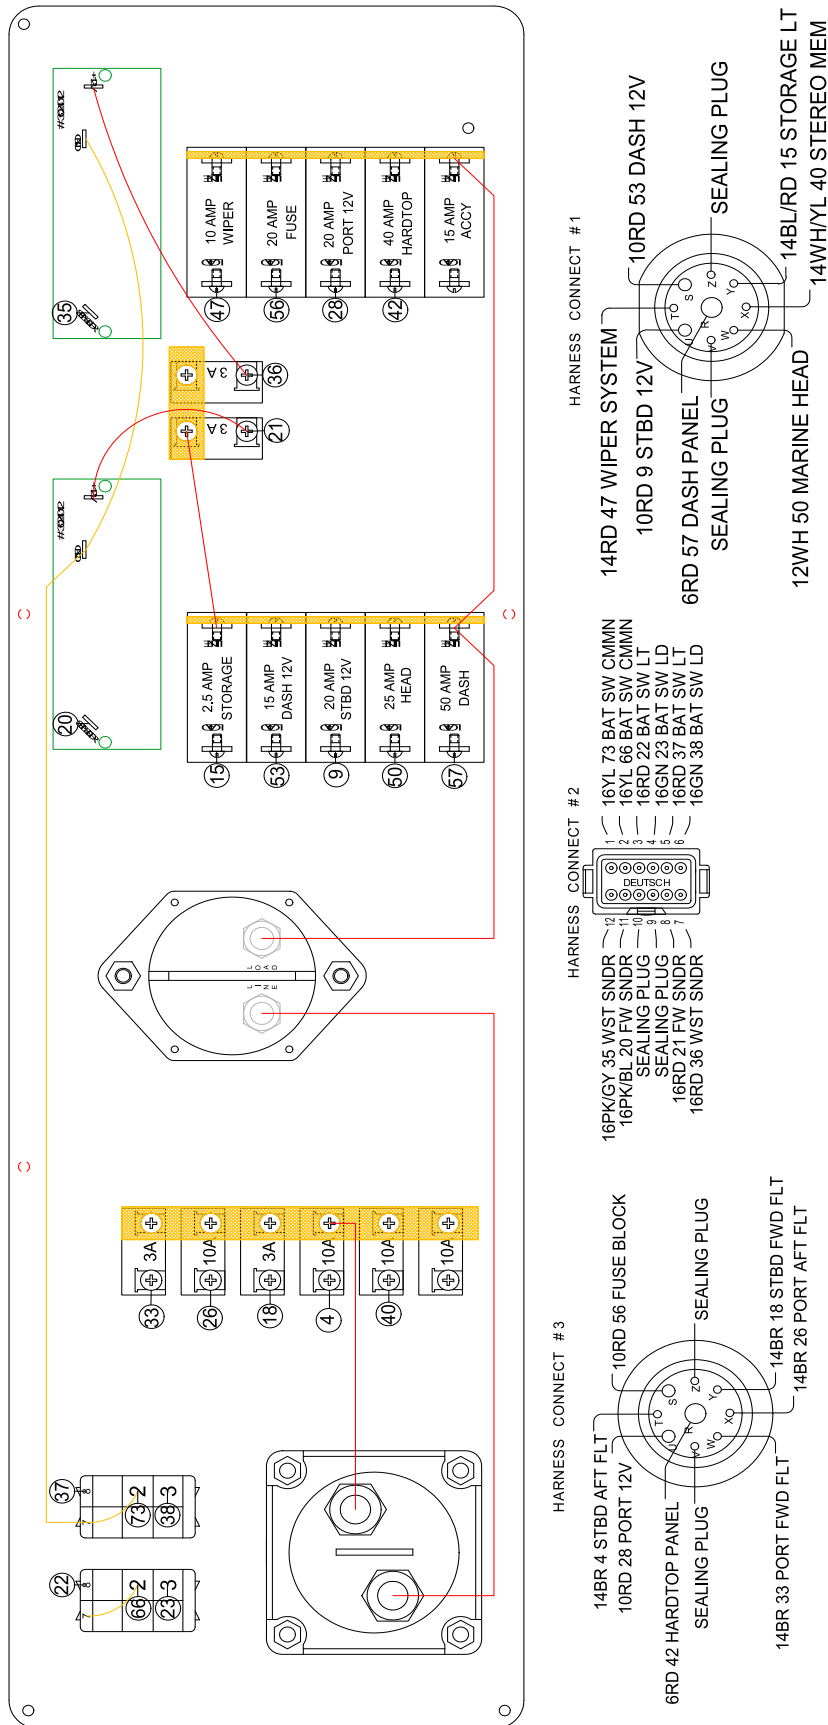


66

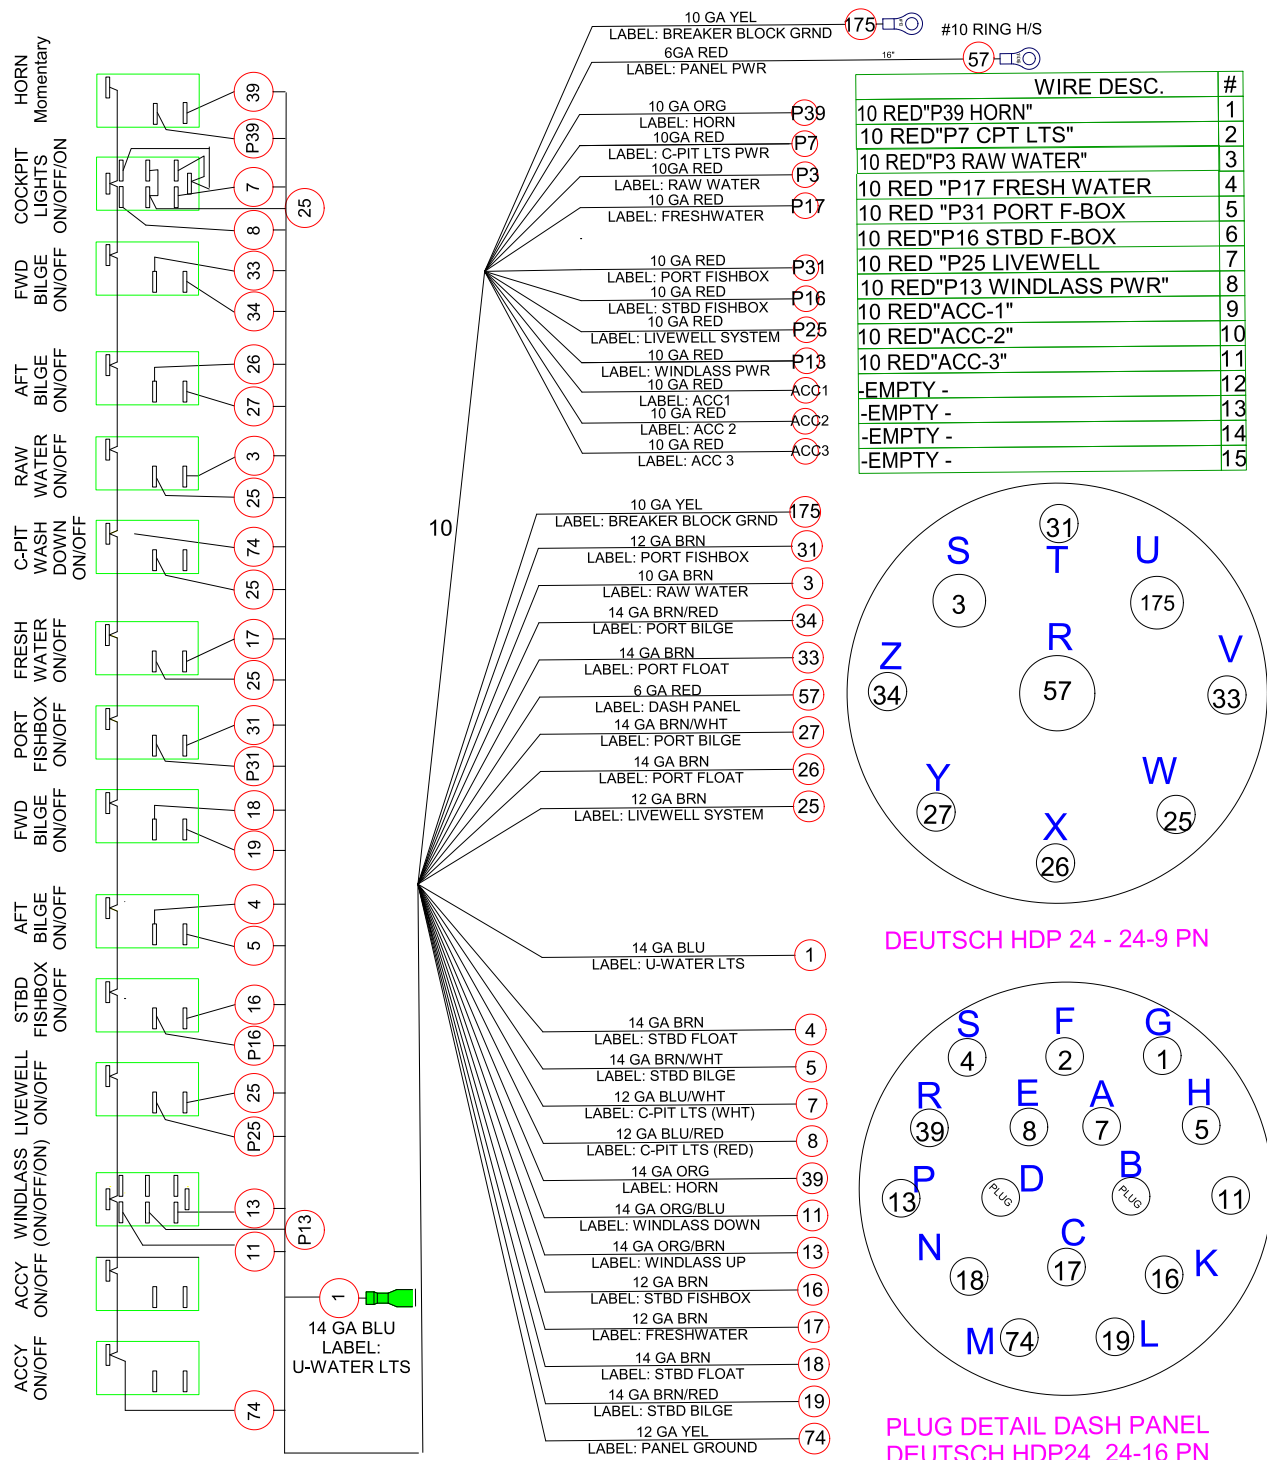


10.4.6 Hardtop Panel Wiring Diagram

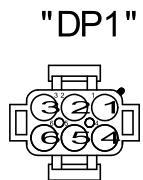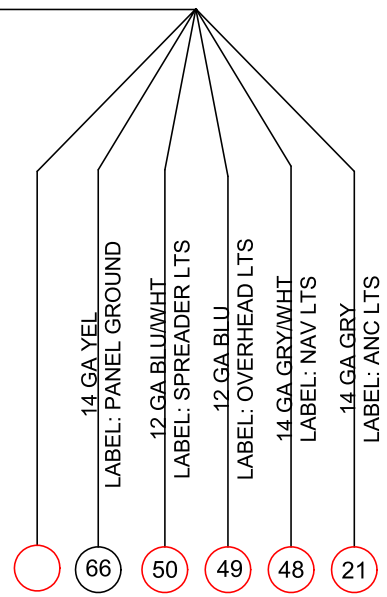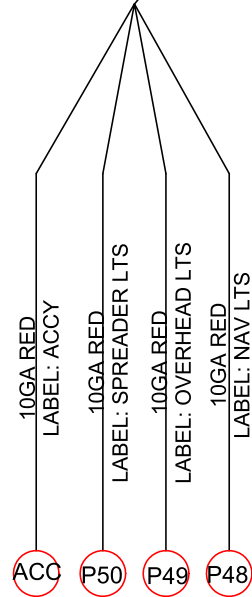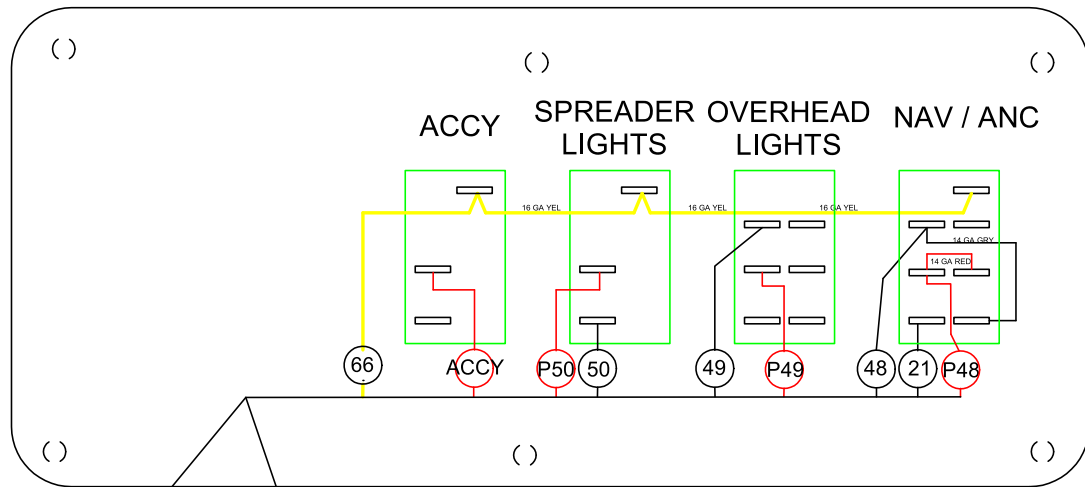


#	WIRE DESC.
1	10RED #ACC
2	10RED# P50 SPREADER LTS
3	10RED#P49 OVERHEAD LTS
4	10RED#P48 NAV/ANC LTS
5	- EMPTY -
6	- EMPTY -

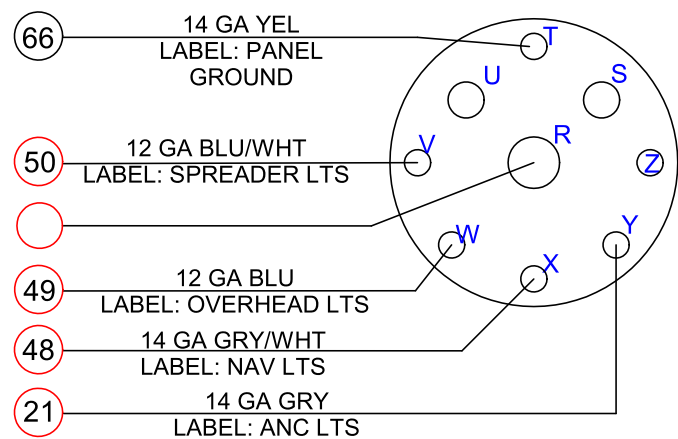


10.4.7 Water Systems Diagram

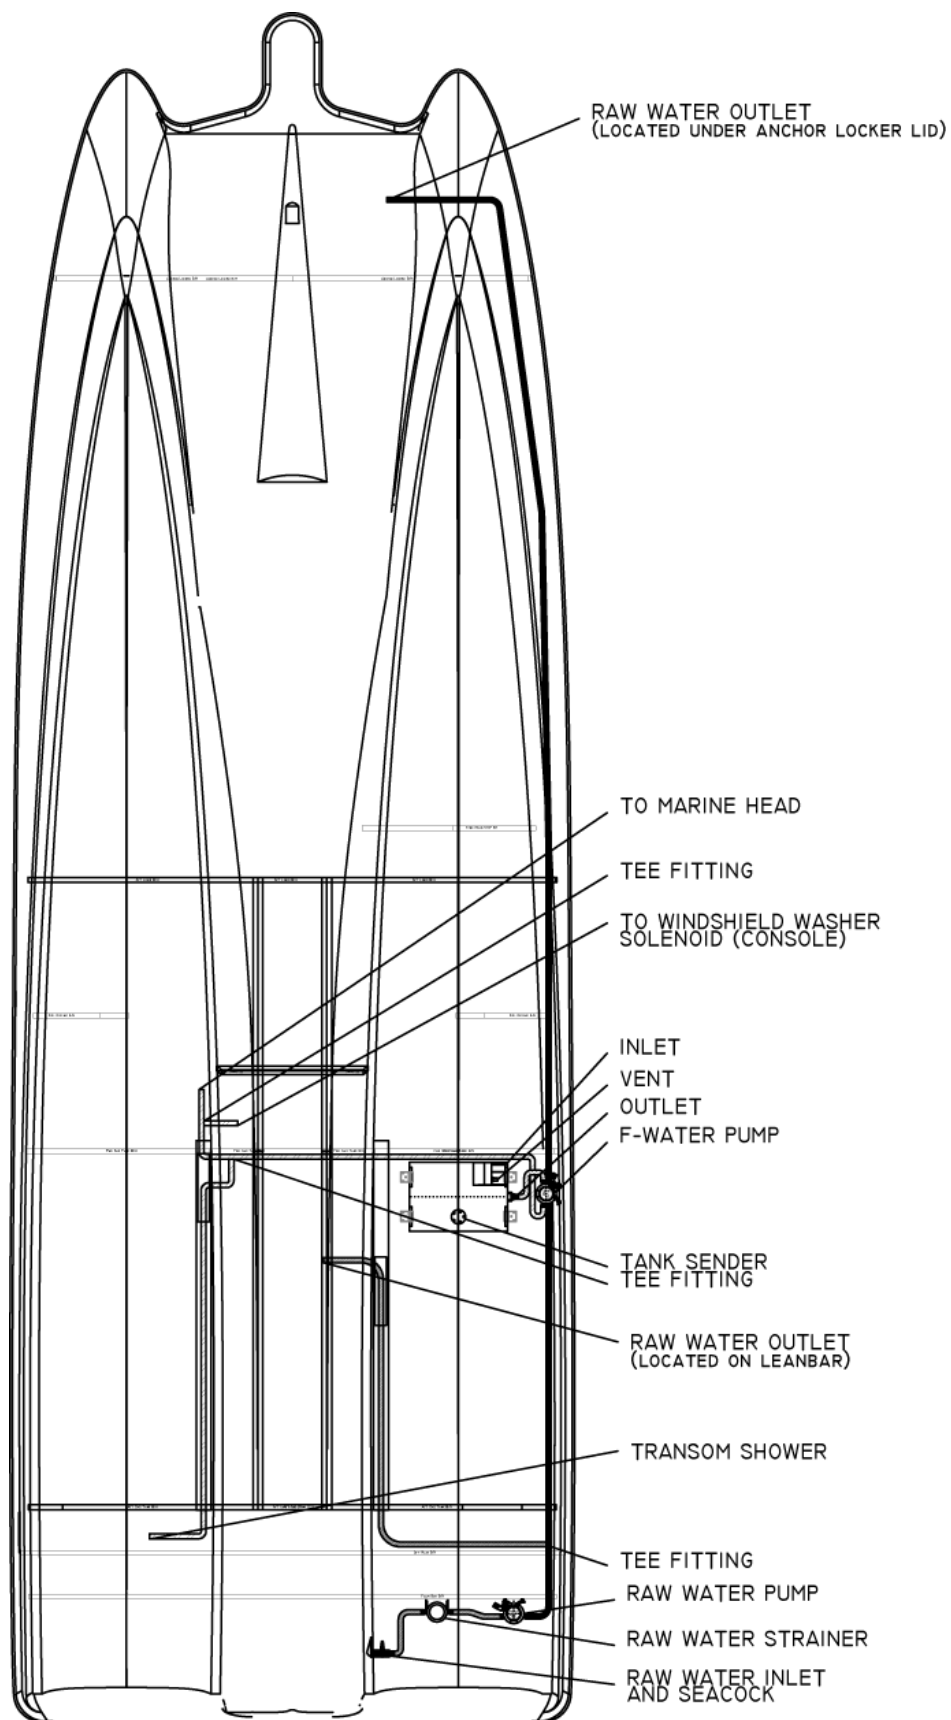


10.4.8 Thru Hull Diagram

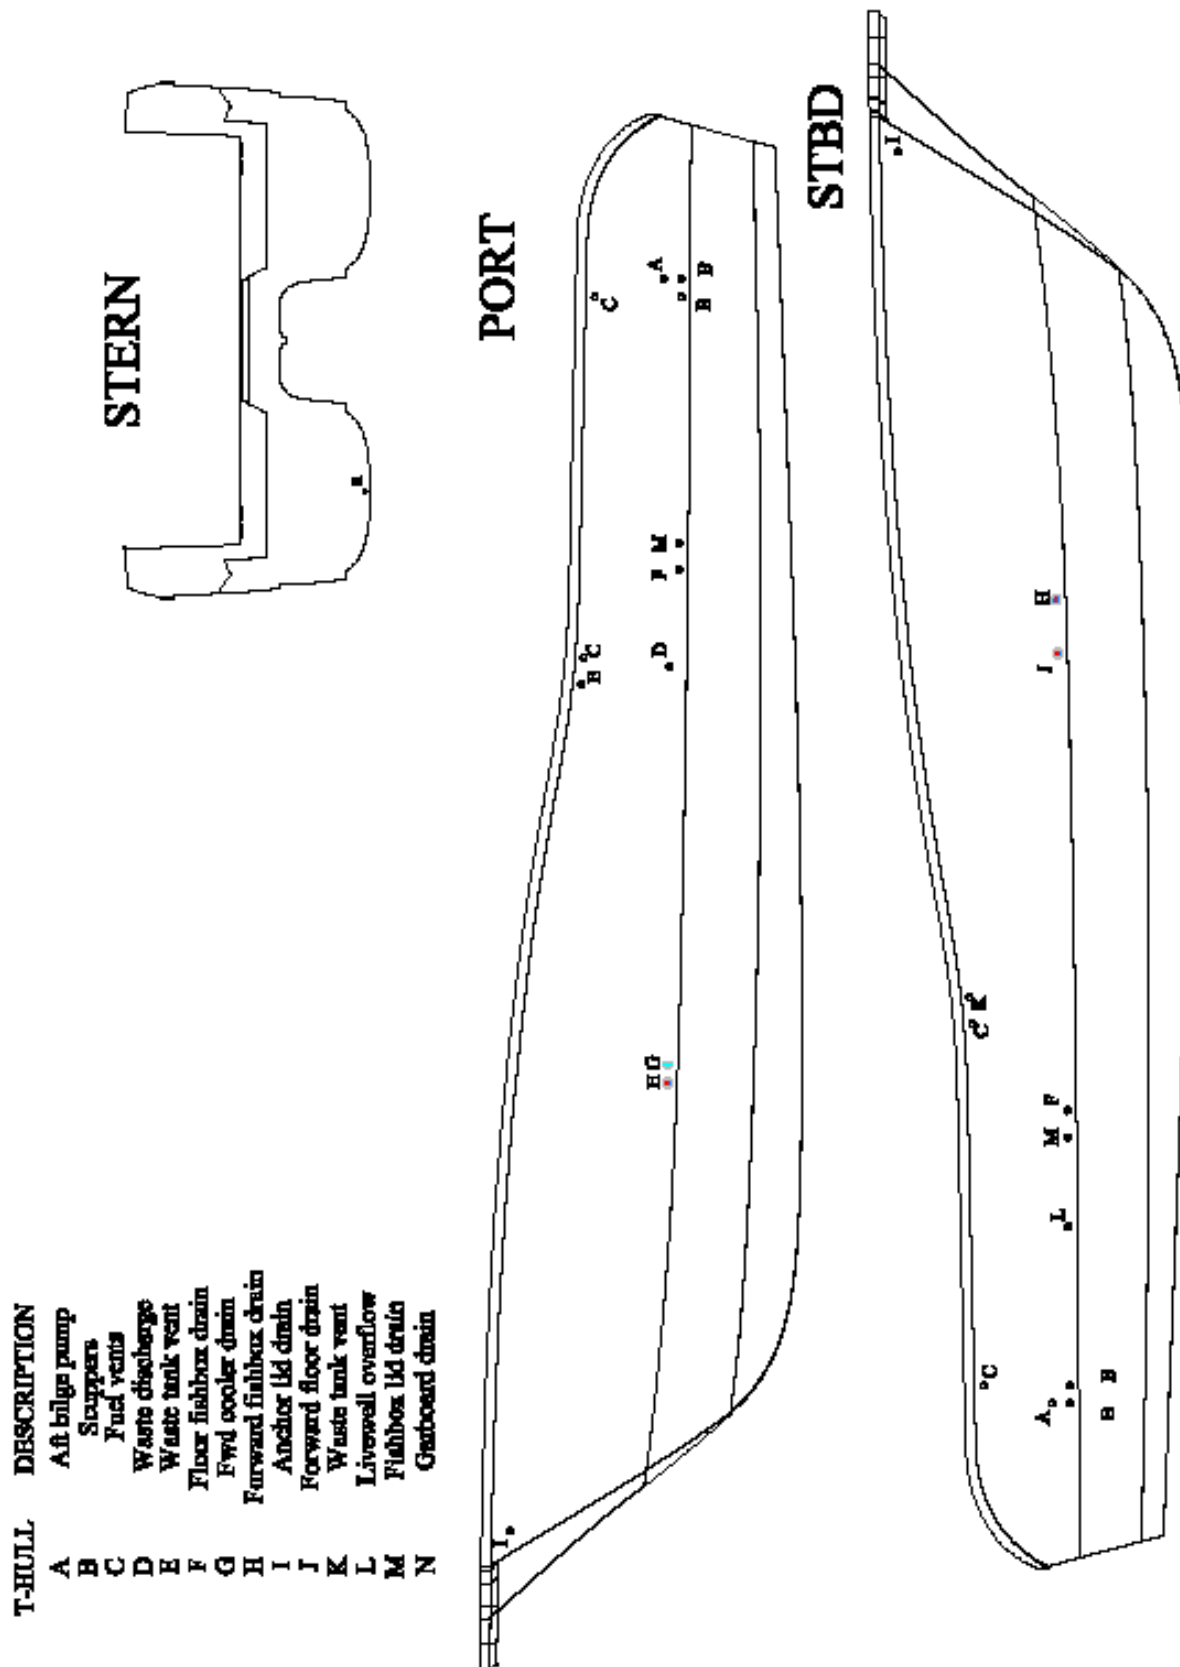

325CC Outrigger Location Diagram


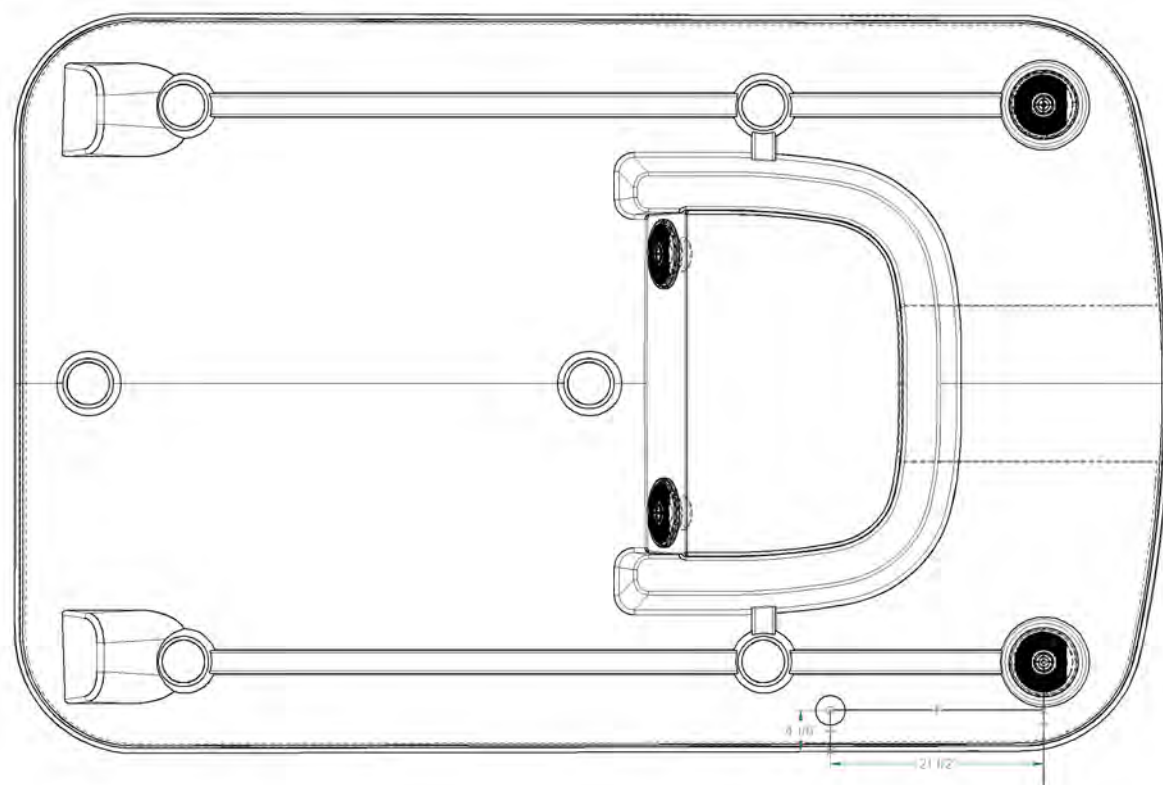


Dimensions start at the intersection of the transom and chine line

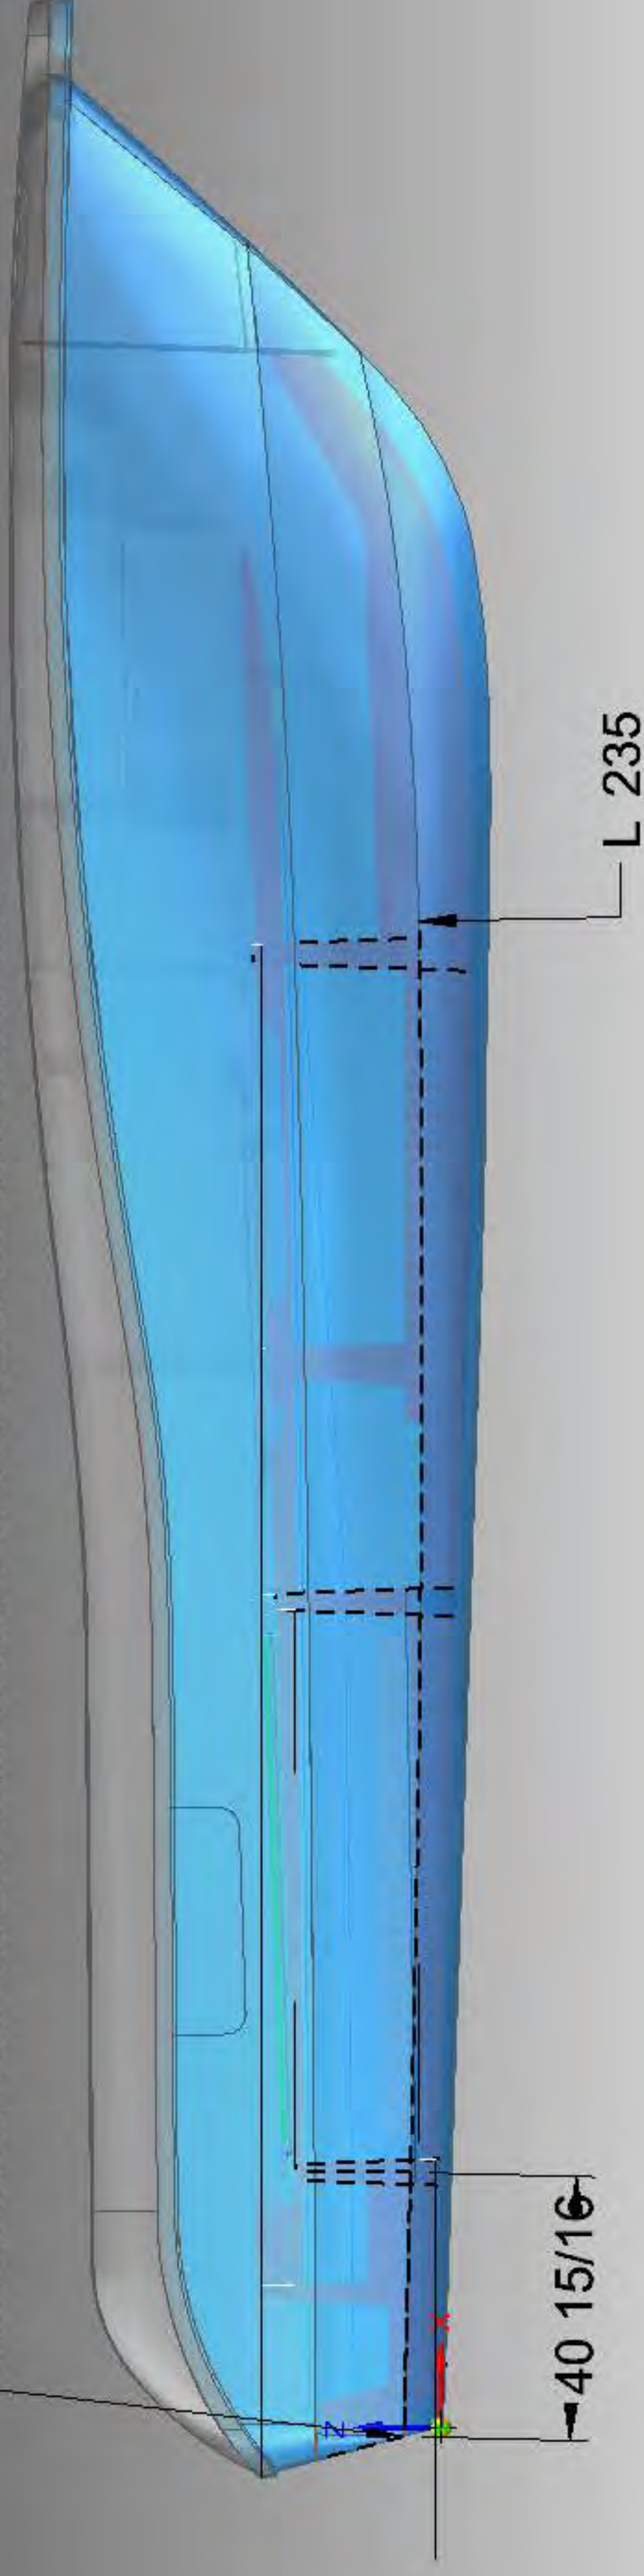

325DC/CC

TRAILER DIMENSIONS (2022)

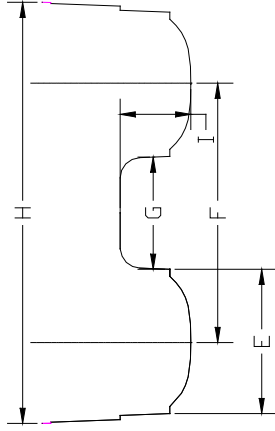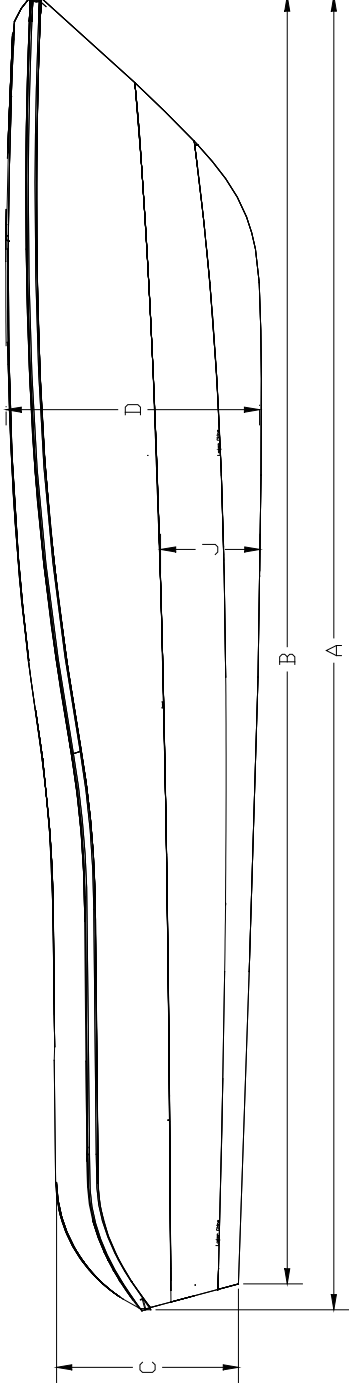

	235CC	230DC	230SD	255DC	280DCX	280CCX	295CC	296DC	325CC	325DC	400DC
A	22' 7"	22' 7"	22' 7"	24'-9 1/2"	27' - 5"	27' - 5"	29' 5/8"	29' 5/8"	32'-0 1/2"	32'-0 1/2"	37'-1"
B				24'-2 1/4"	26' - 10 5/8"	26' - 10 5/8"	28' 5"	28' 5"	31'-4 7/8"	31'-4 7/8"	36'-6"
C	40"	40"	40"	4'-1 1/2"	4' - 3 1/2"	4' - 3 1/2"	4' 3"	4' 3"	4'-6 5/8"	4'-6 5/8"	4'-2 3/8"
D	51"	51"	51"	5'-5 5/8"	5'-10"	5'-10"	5' 11"	5' 11"	6'-3 5/8"	6'-3 5/8"	6'-3 5/8"
E	34 3/4"	34 3/4"	34 3/4"	34 7/8"	3' - 1 1/2"	3' - 1 1/2"	39 1/4"	39 1/4"	43 1/8"	43 1/8"	48 5/8"
F	59 5/8"	59 5/8"	59 5/8"	59 5/8"	64"	64"	67 1/2"	67 1/2"	76 1/4"	76 1/4"	85 7/8"
G	24 3/4"	24 3/4"	24 3/4"	24 3/4"	26"	26"	26 5/8"	26 5/8"	33 1/8"	33 1/8"	34 7/8"
H	8' 6"	8' 6"	8' 6"	99 1/8"	109" - 3/8"	109" - 3/8"	115"	115"	125 1/4"	125 1/4"	147 7/8"
I	17"	17"	17"	21 1/2"	20"	20"	21 1/4"	21 1/4"	21"	21"	20"
J	23"	23"	23"	29 3/8"	30"	30"	28 1/2"	28 1/2"	28 3/4"	28 3/4"	21 3/4"
1	110"	110"	107"	125"	115"	121"	123"	119"	122"	120"	126 3/8"
2	99"	91"	90"	113"	95"	100"	101"	99"	105 1/4"	104 5/8"	101 7/8"
COG w/ Eng	83.41"	92.18"	93.82"	101.27"	106.72"	105	120.35"	123.33"	130.17"	134.88"	157"

INCLUDES PULPIT. SUBTRACT 11 1/2" TO DETERMINE LENGTH TO PORT AND STBD STEM

DIMENSION TAKEN AT THE TRANSOM

DIMENSION TAKEN APPROXIMATELY 15' FROM THE TRANSOM

DIMENSION FROM KEEL TO HARDTOP TOP

DIMENSION FROM WATERLINE TO HARDTOP TOP



WORLD CAT

Chapter 1: Hatches and Lids

Brand: Teak Isle
 Model: 82720-306583
 WC Part #: 20157277
 Application: STBD Hatch Artic White (11 3/16x14 3/4)



Brand: Teak Isle Model:
 82720-306579

WC Part #: 20157278
 Application: Door, Cabin Storage Artic White



Brand: Fin-Addict Marine
 Model: N/A
 WC Part #: 20157011
 Application: 14 X 23 Access Hatch - Acrylic Arctic White



Brand: Fin-Addict Marine
 Model: N/A
 WC Part #: 20151090
 Application: 290CC/320CC Lean Post Lid (Clear)



Brand: Fin-Addict Marine
 Model: N/A
 WC Part #: 20157295
 Application: 290, 320 Transom Door (ST Starboard) (Arctic white)



Chapter 2: Tanks

Brand: SeaStar Solutions (Tanks)
Model: WT001023
WC Part #: 20220041000
Application: Water Tank 20 Gal (325CC/295CC)

Brand: SeaStar Solutions (Tanks)
Model: WTool1020
WC Part #: 20220037000
Application: Waste Tank 15 Gal (325DC,325CC,295CC)



Chapter 3: Thru hulls, Fittings and Plumbing

Brand: Premier Products Ltd.
Model: 56655
WC Part #: 20163452
Application: Thru-Hull, Resin 90° w/SS Cover, 1-1/8"



Brand: Premier Products Ltd.
Model: WC 56675
Part #: 20163455
Application: Thru-Hull, Resin 90 w/SS Cover, 1-1/8" - 1-1/4"



Brand: Premier Products Ltd.
Model: 56656
WC Part #: 20163453
Application: Thru-Hull, Resin 90° w/SS Cover, 1-1/2"



Brand: Premier Products Ltd
Model: 56676

WC Part #: 20163456
Application: Thru-Hull, Resin w/SS Cover, 1-1/2"



Brand: Premier Products Ltd.
Model: 56677


WC Part #: 20163457
Application: Thru-Transom Scupper, Resin, w/ SS Cover, 1-1/2" (4-3/8")

Brand: Acr Industries

Model: 201-307

WC Part #: W7013296

Application: 1 1/2" Ball Valve

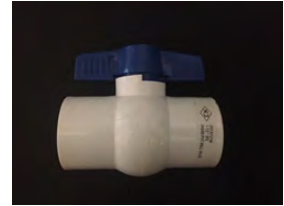

Brand: Ambassador Marine

Model: P56-0201-SS

WC Part #: 20163570

Application: Screw-In S/S Water Outlet



Brand: Shurflo

Model: 255-215

WC Part #: 20161462

Application: Swivel Nut Water Strainer for Washdown Pumps



Brand: Xylem

Model: 30642- -1

WC Part #: 20160142

Application: Plastic Elbow (3/4") 90 DEG



Brand: Marine East

Model: 8923

WC Part #: 20160572

Application: Hose Barb Adapter (1" MPT x 1 1/8" HB)



Brand: Acr Industries

Model: A1258

WC Part #: 20160554

Application: Male Adapter 1/2" MPT x 5/8" HB



Brand: Acr Industries

Model: 3 EL100 G

WC Part #: 20161461

Application: 1" MPT X 1" HB 90 PVC Elbow



Brand: T-H Marine Supplies Inc.
 Model: TEE-150
 WC Part #: 20160467
 Application: 3 Way Reducing Tee (1 1/2" x 3/4" x 1 1/2")



Brand: Attwood Corporation
 Model: DS0212B
 WC Part #: 20163568
 Application: Whale Twist Deck Shower Angled Base (Cold Only)



Brand: Acr Industries
 Model: 1436- 015
 WC Part #: W7013297
 Application: 1 1/2" HB x 1 1/2" Pipe (Livewell



Brand: T-H Marine Supplies Inc.
 Model: TH-1202-B
 WC Part #: 20160218
 Application: Thru Hull Plastic 1 1/8"



Brand: Marine East
 Model: 8080
 WC Part #: 20160529
 Application: 1 1/2" Threaded Tee



Brand: T-H Marine Supplies Inc.
 Model: TH-1592F-B
 WC Part #: 20160392
 Application: Livewell Overflow Drain (Threaded Internal 1 1/2" 90)



Brand: Scandvik Inc.
 Model: 10304
 WC Part #: 20160332
 Application: Stainless Sink Drain Reducer



Brand: Acr Industries
 Model: 1406-015
 WC Part #: 20160589
 Application: PVC 1 1/2 x 1 1/2 Barbed 90 Deg. Elbow



Brand: Marine Town Inc
 Model: 9007219
 WC Part #: 20160550
 Application: 1-1/2" Angled Deck Fill - Water




Brand: Marine Town Inc
 Model: WC9007220
 Part #: 20160551
 Application: 1-1/2" Angled Deck Pumpout - Waste



Brand: Paxton Company
 Model: IS-750
 WC Part #: 20820440
 Application: Headhunter Inlet Strainer
 (3/4")



Brand: Marine Hardware Inc.
 Model: THMR.750-BM
 WC Part #: 20160355
 Application: Thru Hull Bronze 3/4"

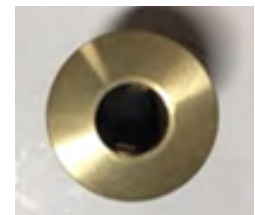

Brand: Premier Products Ltd.
 Model: 56653
 WC Part #: 20163450
 Application: Thru-Hull, Resin 90° w/SS Cover,
 3/4"



Brand: Paxton Company
 Model: IS-750
 WC Part #: 20820440001
 Application: Headhunter Inlet Strainer (3/4")



Brand: Xylem
 Model: 37045-4022
 WC Part #: 26500614
 Application: Jabsco Quiet-Flush Toilet (Elongated Bowl, 78 Degree Discharge)



Chapter 4: Pumps, Float Switches, Plumbing

Brand: Shurflo
 Model: 4248-153-J09
 WC Part #: 20740303000
 Application: Shurflo Pro Blaster Water Pump w/ Deutsch Plug



Brand: ShurFlo
 Model: 1700-020-031
 WC Part #: 20740246
 Application: ShurFlo Livewell Pump w/ Deutsch (1100 GPH)



Brand: Xylem
 Model: 02DM
 WC Part #: 20740298
 Application: Rule-Non-Auto Bilge pump w/detuch (1500 GPH)



Brand: Shurflo
 Model: 3200-003
 WC Part #: 20740248
 Application: Macerator Pump w/ Deutsch Plug



Brand: Attwood Corporation
 Model: BP4553B
 WC Part #: 20740280
 Application: Whale Diaphragm Pump - POSB Gulper Group 12v



Chapter 5: Electrical

Brand:Marinco

Model:701- MDVS-D

WC Part #: 20173371

Application: Motorized Parallel Switch w/ Deutsch Plug



Brand: Marinco

Model: 701- MD-D

WC Part #: 20171492

Application: Motorized Battery Switch w/ Deutsch Plug



Brand: Schmitt & Ongaro Marine Products

Model: 10009CS

WC Part #: 20170929 Application:

Single Trumpet Horn



Brand: Blue Seas System

Model: 7184

WCPart#:20192294

Application: Series Circuit Breaker - Surface



Brand: Pacer Marine

Model: N/A

WC Part #: 20192295

Application: 320/325CC Switch Panel Fuse



Brand:Marinco

Model:705-50A/B

WC Part #: 20190375

Application: Heavy Duty Circuit Breaker (50A)



Brand: Lewmar
 Model: 69600732
 WC Part #: 20170874
 Application: Lewmar Windlass Up/Down Foot Switches (Black)



Brand: Ite Inc.
 Model: TPB1204-4512-8
 WC Part #: 20200393
 Application: ITC Astra Red/Cool White 8MM



Brand: Marinco
 Model: 12VDUSB
 WC Part #: 20173579
 Application: USB Charging Receptacle (2.1A Std Charge)



Brand: Professional Mariner
 Model: 51201B
 WC Part #: 20150382
 Application: PSPT AC Plug Holder w/ Clamp



Brand: Imtra Corp.
 Model: RC533011
 WC Part #: 20173415
 Application: Coastal Plus Wiper Motor 1 1/2" Shaft



Brand: Imtra Corp.
 Model: EX81298-63
 WC Part #: 20170912001
 Application: Knob for Wiper Controls Intermittent Switch



Brand: Professional Mariner
Model: 51071
WC Part #: 20173455
Application: ProSport 5' Battery Bank Cable Extender



Brand: Marinco
Model: 12VBR.OEM
WC Part #: 20190123
Application: 12VDC Outlet for Downriggers



Brand: Blue Sea Systems
Model: 1045B
WC Part #: 20173580
Application: USB Charging Receptacle (4.8A Fast Charge)



Brand: Attwood Corporation
Model: 5550-24S1
WC Part #: 20200389000
Application: Attwood LED Mast Light (24") - S/S Base



Brand: Attwood Corporation
Model: 6345DC1
WC Part #: 20200292
Application: LED Overhead Light (4") (White Light)



Brand: Innovative Lighting Inc.
Model: 012-5592-1
WC Part #: 20200272
Application: LED Cockpit Light



Brand: Innovative Lighting Inc. Model: 012-4592-1
 WC Part #: 20200273
 Application: LED Livewell Light - Red



Brand: T-H Marine Supplies Inc.
 Model: LED-51914
 WC Part #: 20200385000
 Application: LED Spreader Light - 5 LED, 1150 Lumen
 :



Brand: Attwood Corporation
 Model: NV1012SS-DC1
 WC Part #: 20200403
 Application: LED Bow Lights (PR) (ASM-DKMT LT, SS PR)



Brand: Innovative Lighting Inc.
 Model: 061-5000
 WC Part #: 20200287
 Application: LED Storage Light



Brand: Innovative Lighting Inc.
 Model: 060-9900-1
 WC Part #: 20200294
 Application: Storage Light Base (use w/ 20200287)



Brand: Blue Sea Systems
 Model: 7186B
 WC Part #: 20192221
 Application: Circuit Breaker Buss 285 SfcMt 80Amp



Chapter 6: Hardware

Brand: Gem Products Inc.

Model: 1227

WC Part #:20160703

Application: Hinge 2" x 3" Anchor Lid Style



Brand: Scandvik

Inc. Model: 10300

WC Part #: 20160331

Application: Stainless Sink Drain



Brand: Ocean Accessories

LLC Model: E3-151-35

WC Part #: 20161460

Application: E3 Vise Action Compression Latch(Wing Knob w/
Key / Straight Cam)



Brand: Ocean Accessories

LLC Model: M5-60-205-8

WC Part #: 20163542

Application: Push to Close Latch, Slide (Non-Magnet)



Brand: Premier Products

Ltd. Model: 56010

WC Part #: 20160242

Application: 8" Herreshoff Cleat



Brand: C.E. Smith Company

Inc. Model: 53678C

WC Part #: 20163962000

Application: Smith Screwless Rod Holder (30 Degrees)



Brand: Whitecap Industries
 Model: 6082 (188532)
 WC Part #: 20160241
 Application: 5in Straight Chock for pulpit



Brand: Ocean Accessories
 LLC Model: M5-70-014-8
 WC Part #: 20160357
 Application: Magnetic Door Holder (Proud/Flush)



Brand: LaVanture
 Model: LGP6S-170-700-30
 WC Part #: 20163702
 Application: Gas Shock 17" Ext. Length, 30lb, 316SS w/ Composite Ends



Brand: Ocean Accessories
 LLC Model: C7-10-15
 WC Part #: 20430001
 Application: Draw Latch (Small Rubber 4.16")



Brand: Gem Products
 Inc. Model: 2263
 WC Part #: 20160275
 Application: GEM S/S Lift Handle Latch Lock 3"



Brand: Gem Products
 Inc. Model: 68504
 WC Part #: 20163550
 Application: 8" Cutting Edge sleek pull up cleat



Brand: Associated Spring - Raymond
 Model: BRX-1020
 WC Part #: 20163485
 Application: ASI S/S Flat Bracket for Gas Shocks w/10MM



Brand: Marine Town Inc
 Model: 0207673N
 WC Part #: 20163671
 Application: Stainless Steel Cubic Magnet Holder 25 x 10 Proud
 :



Brand: Marine Town Inc
 Model: 0207673N
 WC Part #: 20164003000
 Application: Stainless Steel Cubic Magnet 25 x 10 Proud - North



Brand: RDI
 Model: 1020WD
 WC Part #: 20156871
 Application: S/S 2-Step Cup Holder w/ Drain (92mm)




Brand: C.E. Smith Company
 Inc. Model: 53678C
 WC Part #: 20163962000
 Application: Smith Screwless 70 Rod Holder (30 Deg Cast)



Chapter 7: Table Parts and Other Accessories

Brand: Teak Isle
Model: 82720- 302339
WC Part #: 20156903
Application: Bow Table (Arctic White)

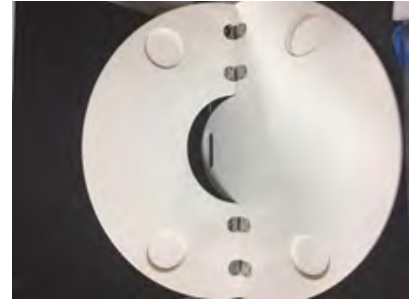

Brand: Itc Inc.
Model: TR4000C
WC Part #: 20157569
Application: Cabin Cockpit Floor Base, 5" (for Table)



Brand: T-H Marine Supplies Inc.
Model: CB-4-DP
WC Part #: 20163444
Application: 4.5" Cable Boot - Black



Brand: Imtra Corp.
Model: RC520916
WC Part #: 20170333
Application: Wiper Blade (16")




Brand: Itc Inc.
Model: TS4000B
WC Part #: 20150360
Application: Cabin Cockpit Table Base



Brand: Ritchie Navigation
Model: HF-743-OEM
WC Part #: 20170943000
Application: Ritchie Compass (Large Profile)



Brand: Sailing Specialties Inc.
Model: 30800013
WC Part #: 20157298
Application: Toilet Paper Holder, Arctic White

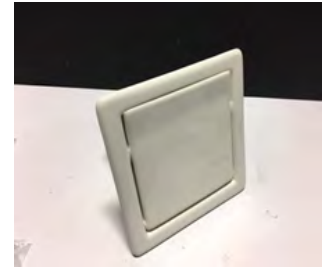

Brand: Attwood
Model: 99IFDV00-1
WC Part #: 20220083
Application: Attwood FDV Fuel Demand Value (No-Antisiphon)



Brand: Attwood
Model: 9ICV000-1
WC Part #: 20163465
Application: Attwood Inlet Control Valve (EPA Diurnal)



Brand: Attwood Corporation
Model: 99DFPVSZ1
WC Part #: 20163488
Application: Pressure Relief Gas Fill (Straight Zamak Chrome)



This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

[illegible]



325CC



WORLDCAT

© 2021 World Cat | All rights reserved | Tarboro, NC | WorldCat.com

5.21